



Catalog

Softstarters

Type PSR, PSE and PSTX


Power and productivity
for a better world™

ABB

Motors use almost one third of the world's generated electricity. So it is safe to say that reliable motor operation is crucial to our modern way of life.

Yet millions of these motors are not run optimally. The wear and tear associated with frequent starts and stops cause unplanned stoppages and shortened operational lifetime. The uptime of full-speed motors would be greatly improved if they used softstarters. As their name implies, softstarters enable

smooth motor starting, and stopping, thus optimizing both new and existing motors. As motor protectors on a global scale, softstarters are a minor change that could have a major impact on our world – allowing us to take control of the processes around us.

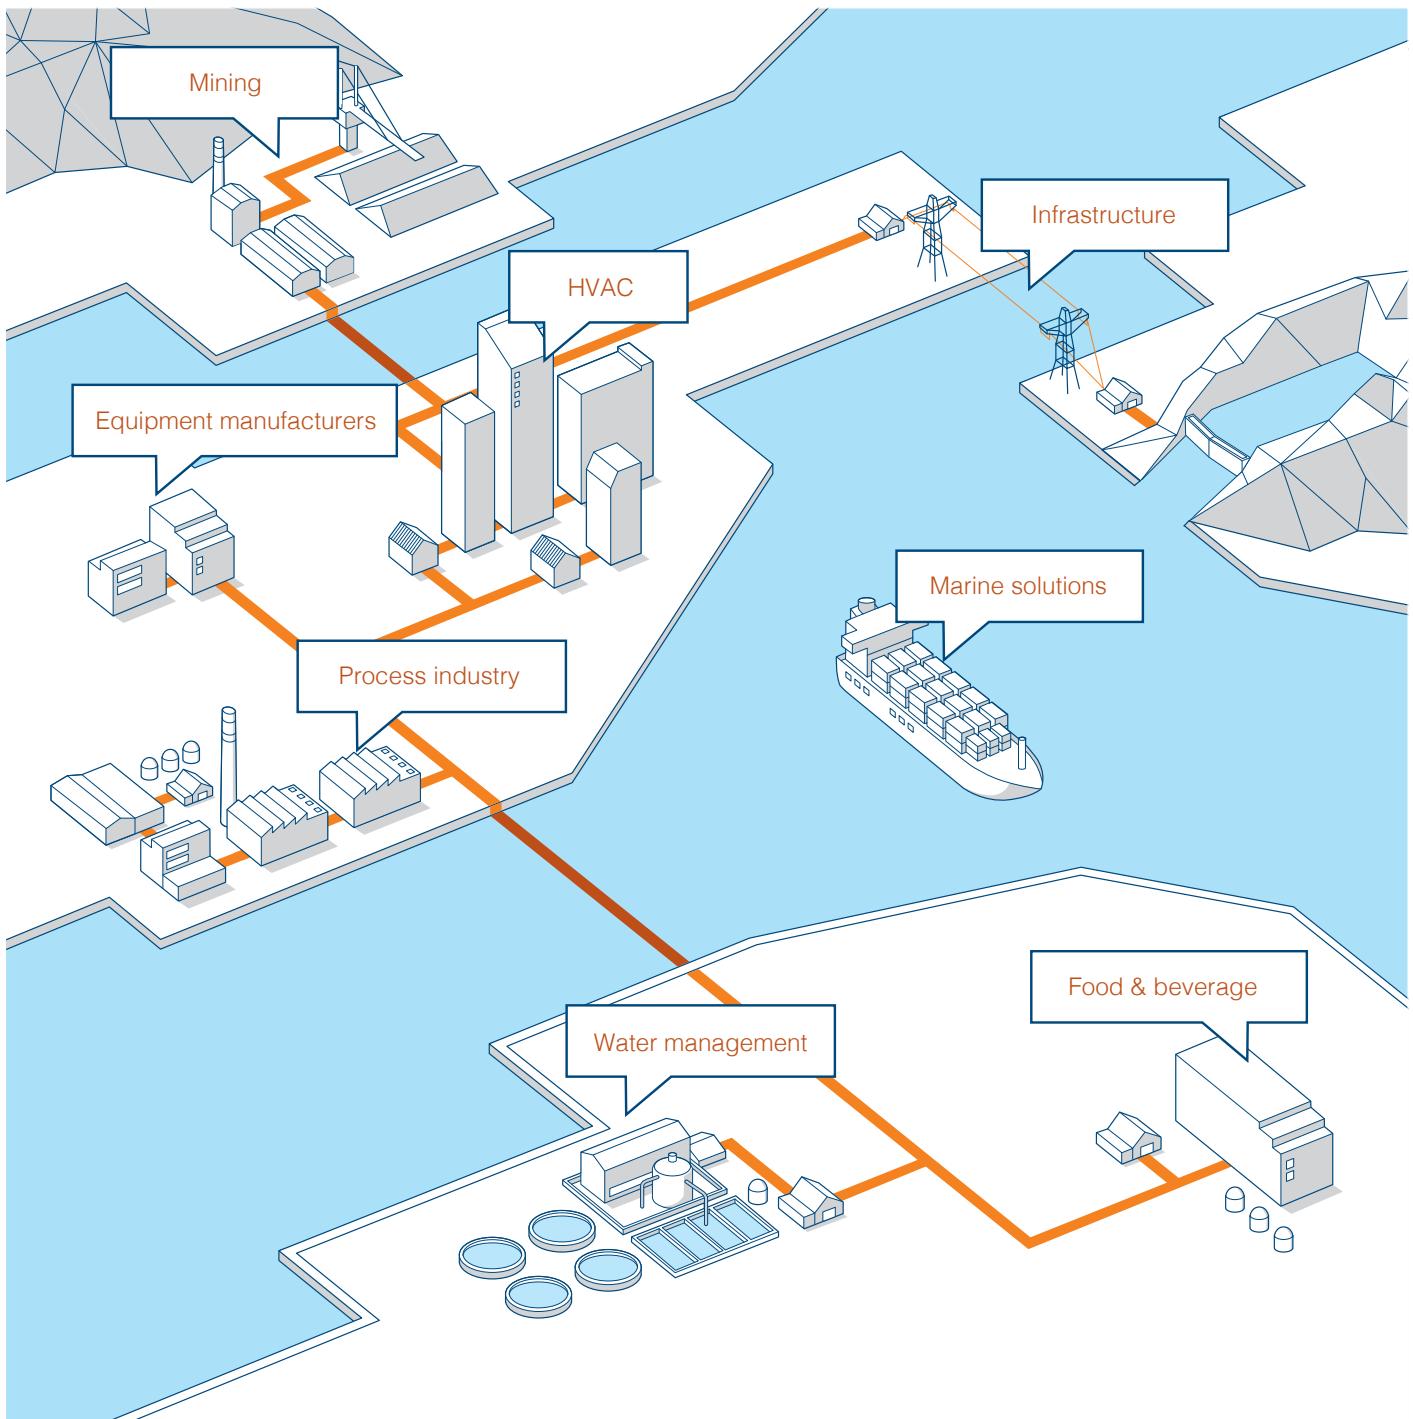

Contents

<u>ABB softstarters</u>	1
<u>PSR – The compact range</u>	2
<u>PSE – The efficient range</u>	3
<u>PSTX – The advanced range</u>	4
<u>Fieldbus communication</u>	5
<u>Marketing material and tools</u>	6

ABB softstarters

How we are helping the industry

1 A softstarter from ABB offers you several values and benefits. Whether you are a consultant, OEM, panel builder or end-user, a softstarter will add to your business value by securing motor reliability, improving installation efficiency and increasing application productivity.


Secure motor Reliability

ABB softstarters help increase your motor's lifetime by protecting it from electrical stress. Starting currents are easily optimized to your load, application and motor size. Over ten motor protection features are included to keep your motor safe from different load and network irregularities.



Improve installation Efficiency

Reduce your installation time and panel size by having all features you need built into your softstarter. Our softstarters are easy to install thanks to their compact design and many built-in features. The built-in bypass saves energy and space while reducing heat generation. A complete motor starting solution in one unit.

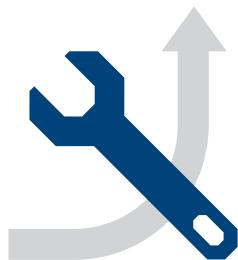

Increase application Productivity

Reduce the number of stops in your production by allowing your softstarter to do more than just starting. Our softstarters reduce the mechanical stress on your motor application, which will increase your uptime. Torque control, pump cleaning, motor brake and many other features enable you to operate your process at its full potential.






Xylem - South Africa ABB's softstarters providing efficiency to the mining industry

One of Xylem's water solutions helps to prevent flooding in mines. Previous softstarters needed a lot of extra protection equipment. Xylem was looking for a simpler solution that would ensure reliability even at 3,500 meters depth. Reducing the number of components by 80 percent shortened installation time by 60 percent. Costs cut to half has helped Xylem sell twice as many panels with softstarters as before.

Why softstarting matters to Xylem

Installation time reduced by

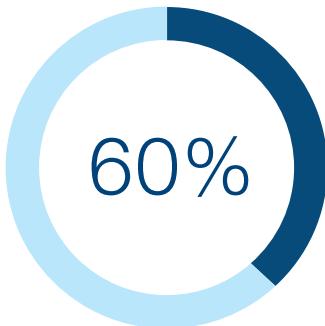

Total panel cost reduced by



For more examples of how ABB's softstarters are helping the industry, visit www.abb.com/lowvoltage/launches/pstx

ABB softstarters

Improving industrial processes around the globe

- 1 A softstarter can do wonders with your operations. Packed with useful features, it reduces the wear of your equipment, improve the reliability of your processes and increase overall productivity.

Controlling pumps

Eliminating water hammering with torque control

Water hammering is a common problem with pumps. It typically results in a lot of wear of pipes and valves when stopping the pump. The ABB softstarter feature torque control stop eliminates water hammering and prolongs the lifetime of the system, while reducing pump downtime.

Keep pipes and pumps clean

Many pumps risk getting clogged over time. This will cause reduced flow and increased risk of pump damage. Thanks to the feature to reverse the direction of the flow and start again with kick-start, ABB softstarters can help prevent and solve pump clogging and associated downtime.

Avoid running dry with underload protection

Damages due to pumps running dry can be avoided with the softstarter feature underload protection. It stops the motor which saves the pump from additional wear and contributes to prolonging its lifetime.

Controlling fans

Soft starting adjusted to application


Fans normally have a high moment of inertia, which makes starting tough and current high. Using an ABB softstarter, the voltage is increased gradually during start, which reduces the current and removes the inrush peak. It is possible to adjust the settings to fit almost any starting condition, from unloaded to fully loaded.

Fast stops with motor braking

It can also take a long time to stop the fan. Active braking using the dynamic brake feature reduces stopping times. This improves process safety when the load has a high moment of inertia and makes fan operation easier for the operator.

Avoid unwanted movements with stand still brake

An idle fan that is rotating backwards, due to wind or airflow from another fan, can be kept still using the stand still brake. It prevents unwanted airflow and improves the control of the system without the need for an external mechanical brake.

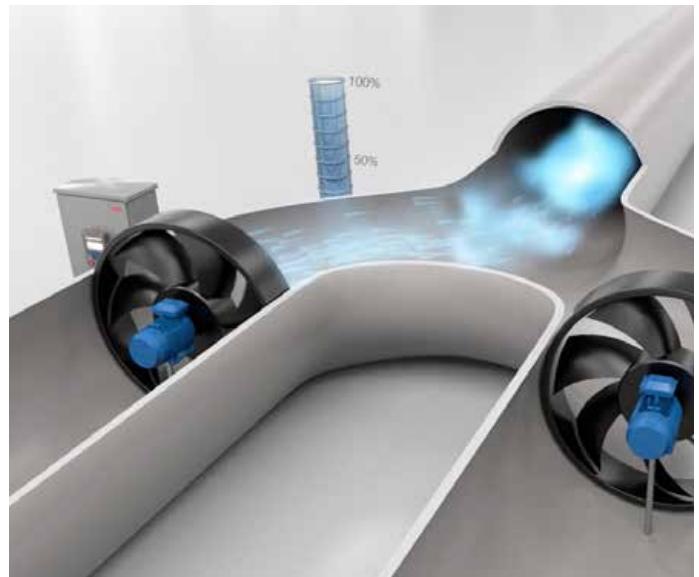

Controlling conveyor belts

Avoid overheating with overload protection

Too much material on a conveyor belt may cause overload and overheating, reducing the reliability and longevity of the motor. ABB's overload protection feature shuts down the motor in case of overload, avoiding overheating.

Increased flexibility with jog with slow speed

After stopping the belt, it may be necessary to run the motor at low speed to correctly position the belt before resuming operation. The jog with slow speed feature makes it possible to position the belt manually, in both forward and reverse direction, before re-starting the belt. This improves process efficiency and eliminates the need for a variable speed drive, a considerably more expensive solution for solving the problem.

Continuous operation with limp mode

Shorted thyristor is a possible problem for a softstarter, putting it out of operation until the component has been replaced. Using limp mode, the softstarter will continue to work with one thyristor shorted, avoiding costly unplanned stoppages.



Controlling compressors

Full control of current with current limit

Many applications are sensitive to high or variable starting currents. The feature current limit makes it possible to start the motor securely even in a weaker network, improving the availability of the equipment and system. Reducing the current means reducing the stress on cables, network and motor.

Full voltage start for scroll compressors

For scroll compressors it is often necessary to start the motor in a very short time while still maintaining a low starting current. Full voltage start is a start mode that gives you almost a direct start but without the current peak.

Phase reversal protection for problem-free commissioning

A motor rotating in the wrong direction, which may occur due to connecting the phases wrongly, may cause severe damage to a compressor. Using phase reversal protection, the motor won't start in the wrong direction, avoiding costly compressor downtime and repairs.



ABB softstarters

Why motor starting and stopping matters

- 1 There are some common issues associated with starting and stopping electrical motors. Depending on requirement, different starting and stopping methods can be used.



Direct-on-line

Direct-on-line starting (DOL) is the easiest and most commonly used starting method. It is suitable for stable networks and mechanically stiff and well-dimensioned shaft systems due to the high current and torque generated during start.

DOL starting is uncontrolled, which means that the motor will start with maximum current and torque regardless of load type.



Star-delta

A star-delta starter reduces current and torque during start. The starting current is about one third compared to direct-on-line starting, although it also reduces the starting torque to about 25 percent.

Star-delta is not adjustable, so if the torque is reduced too much, the motor will not start. Current peaks will happen when switching from star to delta connection.




Softstarter


Like direct-on-line and star delta starters, softstarters are used to start and stop motors in full-speed applications. It eliminates common problems associated with motor starting and stopping, including electrical surges, spikes and high inrush currents.

Because it offers soft starting and stopping, a softstarter is the optimal compromise between a direct-on-line or star-delta starter and a variable speed drive in many full-speed motor applications.

Torque

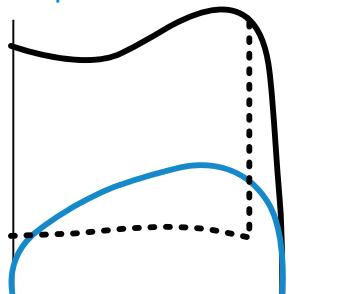

Motor current

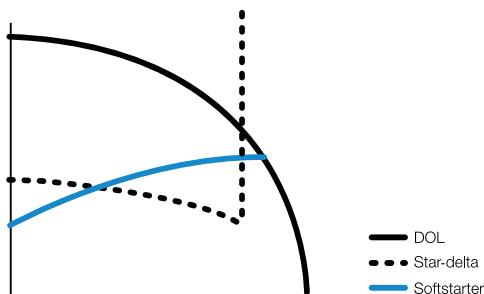

Typical torque and current curves from starting a motor using DOL, star-delta and softstarter.

Variable speed drive

Like a softstarter, a variable speed drive (VSD) can perform soft motor starting and stopping. However, the VSD was designed primarily to control motor speed, resulting in energy efficient motor operation in variable speed applications.

Using a VSD with the sole purpose of ensuring soft starting and stopping of full-speed motors can therefore be considered an unnecessarily advanced solution.

ABB softstarters

A solution for every need

ABB's softstarter offering consists of three ranges, covering every need. The products help you secure motor reliability, improve installation efficiency and increase application productivity.



PSR – The compact range

Technical data:

Rated motor current	3...105 A
Main motor voltage	208...600 V
Control supply voltage	100...240 V AC or 24 V AC/DC



PSE – The efficient range

Technical data:

Rated motor current	30...370 A
Main motor voltage	208...600 V
Control supply voltage	100...250 V AC



PSTX – The advanced range

Technical data:

Rated motor current	30...1250 A (inside delta: 2160 A)
Main motor voltage	208...690 V
Control supply voltage	100...250 V AC

Softstarter feature selection guide

	Current limit	Current limit ramp and dual current limit	Dual overload protection	Underload protection	Power factor protection	Locked rotor protection	Current/voltage imbalance protection	Phase reversal protection	Customer defined protection	Motor heating	PTC/Pt100 input for motor protection	Overvoltage/undervoltage protection	Earth-fault protection	Built-in bypass	Inside-delta connection	Graphical display and keypad	Detachable keypad	Motor runtime and start count	Programmable warning functions	Diagnostics	Overload time-to-trip	Analog output	Fieldbus communication	Multiple languages	Electricity metering	Torque control	Torque limit	Limp mode	Jog with slow speed forward/ reverse	Stand still brake	Sequence start	Full voltage start	Kick start	Manual pump cleaning
PSR	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-			
PSE	•	-	•	-	•	-	•	-	-	-	-	-	•	-	•	-	-	-	-	-	•	0	0	-	-	•	-	•	-	-	•	-		
PSTX	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	17	•	•	•	•	•	•	•	•	•	•			

Secure motor reliability

Improve installation efficiency

Increase application productivity

• Standard o Optional - Not available

ABB softstarters

A part of your motor starting solution

1

Motor starting requires several components to work perfectly together. ABB is a one-stop shop for motor starting, offering all the necessary components and complete motor starting solutions, proven together in numerous installations worldwide.




1 Softstarter

- Soft start and stop with reduced current
- Features to improve process productivity
- Detachable keypad for front door mounting on a panel



2 Short circuit breaker MCCB

- Short circuit protection of motor
- Possibility for electrical isolation

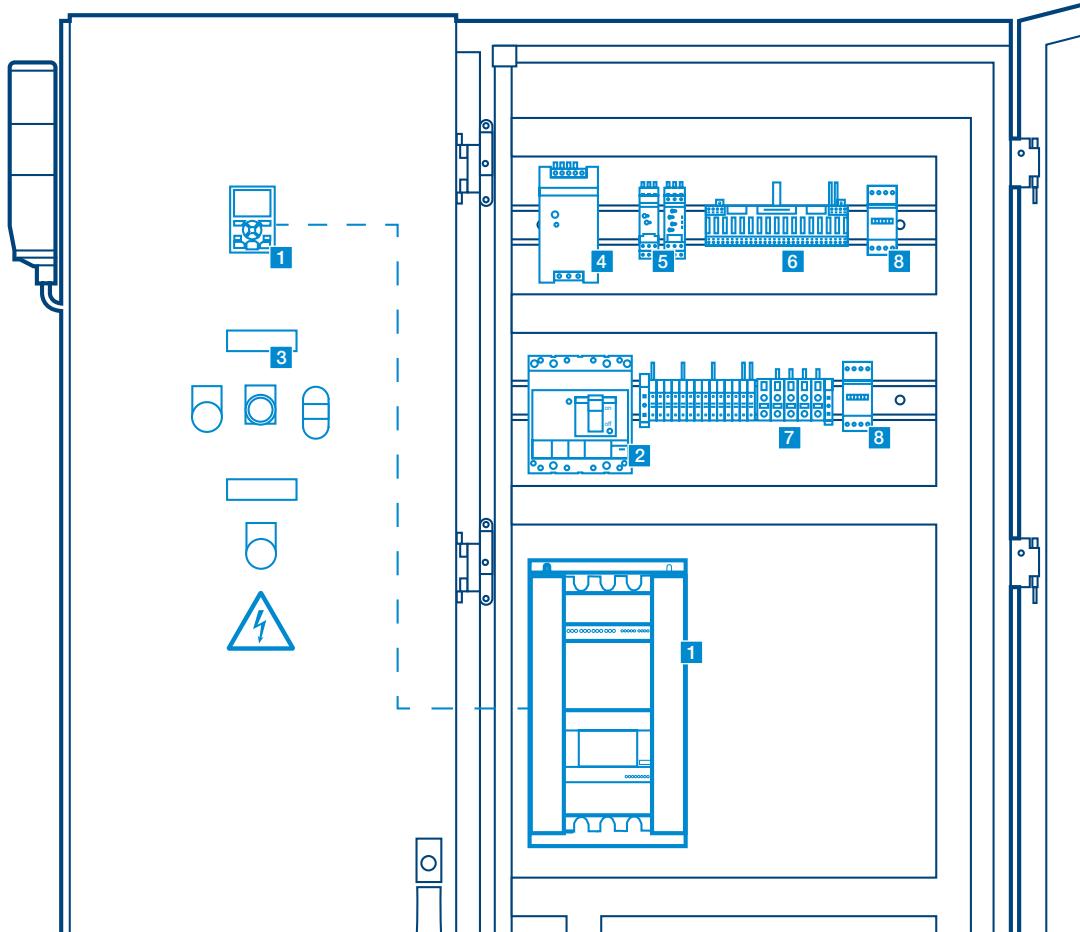

Can I use a softstarter for an ATEX motor?

ABB's softstarters PSR, PSE and PSTX can be used to start ATEX classified motors in Ex environments if the following considerations are taken into account:

- The softstarter has to be placed outside the Ex area. Either in another location or inside an ATEX approved panel.
- A separate ATEX approved overload relay from ABB has to be used together with a line contactor. This overload relay will replace the built-in EOL in the softstarter and has an ATEX approved tripping curve.
- Select softstarter according to normal or heavy-duty start depending on application and line contactor and overload relay with type 2 coordination.





3 Pilot devices

- Remote control of motor
- Indication of softstarter and motor status with light and sound
- Emergency stop of motor



4 Power supply CP-E

- Possible to use 24V AC/DC equipments in the panel, e.g. PLC



5 Liquid level monitoring relays CM-ENS

- Monitoring and signalling the water level



6 PLC 800M

- Automatic control
- Remote communication



7 Terminal blocks SNK range

- Easy installation of control wires



8 Line contactor AF

- Isolation at stop
- Isolation at faults
- Emergency stop
- Back-up DOL starter

Can I use a softstarter on a ship?

ABB's softstarters PSE and PSTX have marine approvals and are certified for marine environment.

Ships uses IT-networks which means that there is a floating electrical ground. It is possible to use an ABB softstarter in such a network but it is recommended to not connect the functional earth or ground on the softstarter to the ship to avoid disturbances from the network to effect the electronics inside the softstarter.

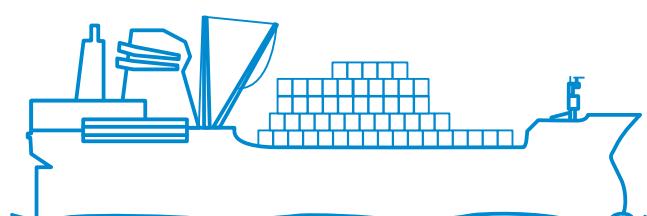


ABB softstarters


Wall mounting instructions

1


Minimum distance to wall mm (in)

Softstarter, type	A	B	C	D
PSR				
PSR3 ... PSR16	0	0	25 (0.98)	N/A
PSR25 ... PSR30	0	0	25 (0.98)	N/A
PSR37 ... PSR45	0	0	25 (0.98)	N/A
PSR60 ... PSR105	0	0	25 (0.98)	N/A
PSE				
PSE18 ... PSE105	100 (3.94)	10 (0.39)	20 (0.79)	N/A
PSE142 ... PSE170	100 (3.94)	10 (0.39)	20 (0.79)	N/A
PSE210 ... PSE370	100 (3.94)	10 (0.39)	20 (0.79)	N/A
PSTX				
PSTX30 ... PSTX105	100 (3.94)	10 (0.39)	20 (0.79)	35 (1.38)
PSTX142 ... PSTX170	100 (3.94)	10 (0.39)	20 (0.79)	35 (1.38)
PSTX210 ... PSTX370	100 (3.94)	10 (0.39)	20 (0.79)	35 (1.38)
PSTX470 ... PSTX570	150 (5.91)	15 (0.59)	20 (0.79)	35 (1.38)
PSTX720 ... PSTX840	150 (5.91)	15 (0.59)	20 (0.79)	35 (1.38)
PSTX1050 ... PSTX1250	150 (5.91)	15 (0.59)	20 (0.79)	35 (1.38)


Minimum distance to front

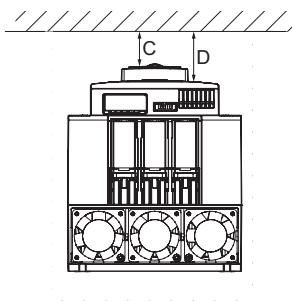

Minimum distance to wall

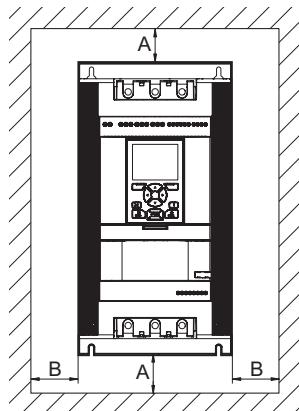

Maximum mounting angle

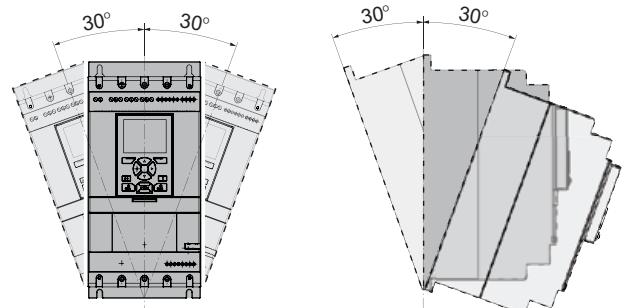

Items included in the box with the softstarter

	Multi-language manual	Terminal kit	Cable and mounting kit for detachable keypad
PSR3 ... PSR105	•	-	-
PSE18 ... PSE370	•	•	-
PSTX30 ... PSTX1250	•	•	•

ABB softstarters

Certifications and approvals

The table below shows the certifications and approvals for ABB's softstarters.

For other certifications and/or approvals, please contact ABB.

Certifications and approvals

	Certifications						Approvals: ship classification societies					
Abbreviation approved in	CE EU	cULus Canada USA	CCC China	EAC Russia	ANCE Mexico	C-tick Australia	ABS	GL	Lloyd's Register	DNV	CCS	
PSR3 ... PSR105	•	•	•	•	-	•	-	-	-	-	-	
PSE18 ... PSE370	•	•	•	•	•	•	•	•	•	•	•	
PSTX30 ... PSTX370	•	•	•	•	•	•	•	•	•	•	•	
PSTX470 ... PSTX570	•	•	•	•	Pending	Pending	Pending	Pending	Pending	Pending	Pending	
PSTX720 ... PSTX1250	•	•	Pending	•	Pending	Pending	Pending	Pending	Pending	Pending	Pending	

- Standard design approved, the products bear the certification mark when it is required.

Directives and standards

No. 2006/95/EC	Low voltage equipment
No. 2004/108/EC	Electromagnetic compatibility
EN 60947-1	Low-voltage switchgear and controlgear - Part 1: General rules
EN 60947-4-2	AC semiconductor motor controllers and starters
UL 508	Industrial Control Equipment
CSA C22.2 No 14	Industrial Control Equipment



PSR – The compact range

2

PSR – The compact range

Introduction	2/2
Overview	2/4
Ordering details	2/5
Accessories	2/6
Technical data	2/7
Dimensions	2/8
Circuit diagrams	2/9

PSR – The compact range

Introduction

2



The PSR softstarter is the most compact of all the softstarter ranges which allows for design of compact starting equipment. A PSR together with a manual motor starter makes up a far more compact starting solution than a star-delta starter, and with the built-in bypass, the energy losses inside the softstarter are highly reduced.

- Two-phase controlled
- Operational voltage: 208...600 V AC
- Wide rated control supply voltage: 100...240 V AC, 50/60 Hz or 24 V AC/DC
- Rated operational current: 3...105 A
- Soft start with voltage ramp
- Soft stop with voltage ramp
- Built-in bypass for energy saving and easy installation
- Easy set-up by three potentiometers
- Fieldbus communication with FieldBusPlug adapter and the FieldBusPlug
- Run and Top of Ramp relays available for monitoring
- Connection kits available for connection to ABB's manual motor starters (MMS)

Secure motor
Reliability

Improve installation
Efficiency

Increase application
Productivity

Reduce the electrical stresses and keep the motor protected with the MMS

The PSR reduces the starting current for the motor. The possibility to connect it to the manual motor starter makes it possible to build a compact and complete starting solution with overload and short-circuit protection.

Saving time and money with built-in bypass and easy set-up

On the PSR, the bypass is built in and verified by ABB, saving you time during installation and space in your panel. Set-up is done through three potentiometers making it very fast and easy.

Reduce the mechanical stresses on your motor

Soft start and stop with PSR will reduce mechanical wear and tear on the application and increase the availability and uptime.

PSR – The compact range

Introduction

2



Motor protection with manual motor starter

Use the PSR together with the MMS to get a complete motor starter with soft start and stop together with overload and short circuit protection.

Connection kit (optional)

The connection kits simplifies installation of the PSR by making the connection to the MMS screwless.

Screw or DIN-rail mounted

PSR is fast and easy to install by using screw mounting or DIN-rail mounting (PSR3 ... PSR45).

Output signal relays

PSR has output relays for Run and Top of ramp (PSR25 ... PSR105).

LED indicators



PSR has LED indicators for On/Ready and Run/Top of ramp.

Three potentiometers for settings

Set-up is made very easy with only three potentiometers, for start ramp time, stop ramp time and initial/end voltage level.

Settings

- ① Start = 1...20 sec
- ② Stop = 0...20 sec - including the step down voltage
Step down = 2% reduction for each second increased stop ramp
- ③ $U_{ini} = 40\ldots70\%$ results in end voltage = 30...60%

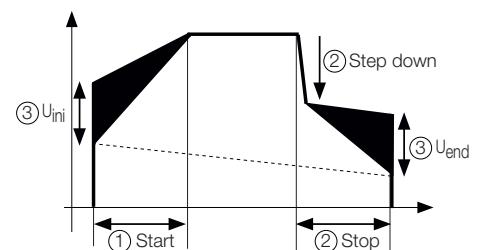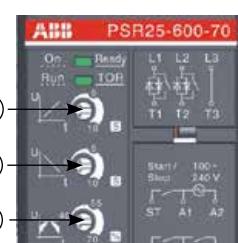

PSR – The compact range Overview

2



Normal start In-line connected (400 V) kW IEC, max. A	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
(440-480 V) hp	1.5	3	4	5.5	7.5	11	15	18.5	22	30	37	45	55
UL, max. FLA	3.9	6.8	9	12	16	25	30	37	45	60	72	85	105
	2	3	5	7.5	10	15	20	25	30	40	50	60	75
	3.4	6.1	9	11	15.2	24.2	28	34	46.2	59.4	68	80	104

400 V, 40 °C

Using manual motor starters type 1 coordination will be achieved ¹⁾	Manual motor starter (50 kA)											
	MS116			MS132				MS450		MS495		—

Using gG fuses type 1 coordination will be achieved ¹⁾	Fuse protection (50 kA) gG Fuse											
	10 A	16 A	25 A	32 A	50 A	63 A	100 A	125 A	200 A	250 A		

Suitable switch fuse for the above gG fuses ¹⁾	Switch fuse											
	OS32GD			OS125GD			OS250D					

J-type fuses for UL coordination ¹⁾	Max. fuse, J-type											
	35 A			60 A			90 A			110 A	125 A	150 A

Overload protection is used to protect the motor from over heating ¹⁾	Thermal overload relay											
	TF42DU			TA75DU			TA110DU					

The line contactor is not required for the softstarter itself but often used to open if OL trips ¹⁾	Line contactor											
	AF9	AF12	AF16	AF26	AF30	AF38	AF52	AF65	AF80	AF96	AF116	

¹⁾ This is an example of coordination. For more examples see: applications.it.abb.com/SOC

PSR – The compact range

Ordering details



1SFC132297F0002

PSR3 ... PSR16



1SFC132298F0002

PSR25 ... PSR30



1SFC132299F0002

PSR37 ... PSR45



1SFC132300F0002

PSR60 ... PSR105



2

Description

Selection table for normal start. Typical applications:

- Bow thruster
- Centrifugal pump
- Compressor
- Conveyor belt (short)
- Elevator

For a more precise selection, use the online softstarter selection tool available by scanning the shown QR code or using the selection tool available on:

new.abb.com/low-voltage/products/softstarters

Rated operational voltage U_e , 208...600 V AC

Rated control supply voltage, U_s , 100...240 V AC, 50/60 Hz

IEC				UL/CSA				Type	Order code	Weight pkg (1 pce)	
Rated operational power				Rated operational power						kg	(lb)
230 V	400 V	500 V	current	200 / 208 V	220 / 240 V	440 V	550 / 600 V	FLA			
P _e kW	P _e kW	P _e kW	I _e A	P _e hp	P _e hp	P _e hp	P _e hp	A			
0.75	1.5	2.2	3.9	0.5	0.75	2	2	3.4	PSR3-600-70	1SFA896103R7000	0.45 (0.99)
1.5	3	4	6.8	1	1.5	3	5	6.1	PSR6-600-70	1SFA896104R7000	0.45 (0.99)
2.2	4	4	9	2	2	5	7.5	9	PSR9-600-70	1SFA896105R7000	0.45 (0.99)
3	5.5	5.5	12	3	3	7.5	10	11	PSR12-600-70	1SFA896106R7000	0.45 (0.99)
4	7.5	7.5	16	3	5	10	10	15.2	PSR16-600-70	1SFA896107R7000	0.45 (0.99)
5.5	11	15	25	7.5	7.5	15	20	24.2	PSR25-600-70	1SFA896108R7000	0.65 (1.43)
7.5	15	18.5	30	7.5	10	20	25	28	PSR30-600-70	1SFA896109R7000	0.65 (1.43)
7.5	18.5	22	37	10	10	25	30	34	PSR37-600-70	1SFA896110R7000	1.00 (2.20)
11	22	30	45	15	15	30	40	46.2	PSR45-600-70	1SFA896111R7000	1.00 (2.20)
15	30	37	60	20	20	40	50	59.4	PSR60-600-70	1SFA896112R7000	2.20 (4.85)
22	37	45	72	20	25	50	60	68	PSR72-600-70	1SFA896113R7000	2.27 (5.00)
22	45	55	85	25	30	60	75	80	PSR85-600-70	1SFA896114R7000	2.27 (5.00)
30	55	55	105	30	40	75	100	104	PSR105-600-70	1SFA896115R7000	2.27 (5.00)

Rated operational voltage U_e , 208...600 V AC

Rated operational voltage, U_s , 24 V AC/DC

0.75	1.5	2.2	3.9	0.5	0.75	2	2	3.4	PSR3-600-11	1SFA896103R1100	0.45 (0.99)
1.5	3	4	6.8	1	1.5	3	5	6.1	PSR6-600-11	1SFA896104R1100	0.45 (0.99)
2.2	4	4	9	2	2	5	7.5	9	PSR9-600-11	1SFA896105R1100	0.45 (0.99)
3	5.5	5.5	12	3	3	7.5	10	11	PSR12-600-11	1SFA896106R1100	0.45 (0.99)
4	7.5	7.5	16	3	5	10	10	15.2	PSR16-600-11	1SFA896107R1100	0.45 (0.99)
5.5	11	15	25	7.5	7.5	15	20	24.2	PSR25-600-11	1SFA896108R1100	0.65 (1.43)
7.5	15	18.5	30	7.5	10	20	25	28	PSR30-600-11	1SFA896109R1100	0.65 (1.43)
7.5	18.5	22	37	10	10	25	30	34	PSR37-600-11	1SFA896110R1100	1.00 (2.20)
11	22	30	45	15	15	30	40	46.2	PSR45-600-11	1SFA896111R1100	1.00 (2.20)
15	30	37	60	20	20	40	50	59.4	PSR60-600-11	1SFA896112R1100	2.20 (4.85)
22	37	45	72	20	25	50	60	68	PSR72-600-11	1SFA896113R1100	2.27 (5.00)
22	45	55	85	25	30	60	75	80	PSR85-600-11	1SFA896114R1100	2.27 (5.00)
30	55	55	105	30	40	75	100	104	PSR105-600-11	1SFA896115R1100	2.27 (5.00)

PSR – The compact range

Accessories

2

	1SFC132169F0001		1SFC13224AF0001
PSR16-MS116		PSR30-MS132	
	1SFC132170F0001		1SFC132208F0002
PSR45-MS450		PSR105-MS495	
	1SFC132171F0001		1SFC132325F0001
PSR-FAN3-45A		PSR-FAN60-105A	
	1SFC132012PF002		1SFC132168F0001
PSLW		PS-FBPA	

For softstarter type	Type	Order code	Pkg qty	Weight (1 pce) kg	(lb)
Connection kit					
PSR3 ... PSR16 with MS116 or MS132	PSR16-MS116	1SFA896211R1001	1	0.022	(0.049)
PSR25 ... PSR30 with MS132-12 ... MS132-32	PSR30-MS132	1SFA896212R1001	1	0.040	(0.088)
PSR37 ... PSR45 with MS450	PSR45-MS450	1SFA896213R1001	1	0.034	(0.075)
PSR60 ... PSR105 with MS495	PSR105-MS495	1SAM501903R1001	1	0.050	(0.110)
For softstarter type	Type	Order code	Pkg qty	Weight (1 pce) kg	(lb)
Fan					
PSR3 ... PSR45	PSR-FAN3-45A	1SFA896311R1001	1	0.010	(0.022)
PSR60 ... PSR105	PSR-FAN60-105A	1SFA896313R1001	1	0.013	(0.029)
For softstarter type	Type	Order code	Pkg qty	Weight (1 pce) kg	(lb)
Terminal enlargements					
PSR60 ... PSR105	PSLW-72	1SFA899002R1072	1	0.150	(0.033)
Wire range mm ² 1 x 10...50 mm ² , 2 x 10...25 mm ²					
For softstarter type	Type	Order code	Pkg qty	Weight (1 pce) kg	(lb)
FieldBusPlug connection accessory					
PSR3 ... PSR105	PS-FBPA	1SFA896312R1002	1	0.060	(0.132)

PSR – The compact range

Technical data

Softstarter types	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
Rated insulation voltage U_i	600 V												
Rated operational voltage U_e	208...600 V +10%/-15%, 50/60 Hz ±5%												
Rated control supply voltage U_c	100...240 V AC, 50/60Hz ±5% or 24 V AC/DC, +10%/-15%,												
Starting capacity at I_s	4 x I_s for 6 sec.												
Number of starts per hour	See table below for details												
standard	10 ¹⁾												
with aux. fan	20 ¹⁾												
Ambient temperature													
during operation	-25...+60 °C (-13...+140 F) ²⁾												
during storage	-40...+70 °C (-40...+158 F)												
Maximum altitude	4000 m (13123 ft) ³⁾												
Degree of protection													
main circuit	IP20												IP10
control circuit	IP20												
Power consumption													
Supply circuit													
at 100...240 V AC	12 VA												10 VA
at 24 V AC/DC	5 W												
Max. Power loss at rated I_s	0.7 W	2.9 W	6.5 W	11.5 W	20.5 W	25 W	36 W	5.5 W	8.1 W	3.6 W	5.2 W	7.2 W	6.6 W
Connectable cable area													
main circuit	1 x 0.75...2.5 mm ² (19...14 AWG)							1 x 2.5...10 mm ² (14...8 AWG)		1 x 6...35 mm ² (10...2 AWG)			1 x 10...95 mm ² (8...4/0 AWG)
	2 x 0.75...2.5 mm ² (19...14 AWG)							2 x 2.5...10 mm ² (14...8 AWG)		2 x 6...16 mm ² (10...6 AWG)			2 x 6...35 mm ² (10...2 AWG)
control circuit	1 x 0.75...2.5 mm ² (19...14 AWG)							1 x 0.75...2.5 mm ² (19...14 AWG)					
	2 x 0.75...2.5 mm ² (19...14 AWG)							2 x 0.75...1.5 mm ² (19...16 AWG)					
Signal relays													
for run signal													
resistive load	3 A							3 A					
AC-15 (contactor)	0.5 A							0.5 A					
for top of ramp signal													
resistive load	-							3 A					
AC-15 (contactor)	-							0.5 A					
LED													
for On/Ready	Green												
for Run/Top of ramp	Green												
Settings													
Ramp time during start	1...20 sec.												
Ramp time during stop	0...20 sec.												
Initial- and end voltage	40...70%												

¹⁾ Valid for 50% on time and 50% off time. If other data is required, contact your local ABB office.

²⁾ Above 40 °C (104 F) up to max. 60 °C (140 F) reduce the rated current with 0.8% per °C (0.44% per F).

³⁾ When used at high altitudes, above 1000 meters (3281 ft) up to 4000 meters (13123 ft), de-rate the rated current using the following formula.

$$[\% \text{ of } I_s = 100 - \frac{x \cdot 1000}{150}] \quad x = \text{actual altitude of the softstarter in meter.} \quad [\% \text{ of } I_s = 100 - \frac{y \cdot 3280}{497}] \quad y = \text{actual altitude of the softstarter in feet.}$$

For de-rating of voltage, contact your local ABB office.

Number of starts per hour using PSR softstarters

Motor current	Starts/hour without auxiliary fan								Starts/hour with auxiliary fan							
	10	20	30	40	50	60	80	100	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	
3 A				PSR3												
6 A				PSR6												
9 A			PSR9			PSR12		PSR16	PSR25							
12 A		PSR12		PSR16		PSR25		PSR30								
16 A	PSR16		PSR25		PSR30		PSR37									
25 A	PSR25	PSR30		PSR37		PSR45		PSR60		PSR25	PSR30	PSR37		PSR45		
30 A	PSR30	PSR37		PSR45		PSR60		PSR72		PSR30	PSR37			PSR45		
37 A	PSR37		PSR45		PSR60		PSR72	PSR85	PSR105		PSR37		PSR45		PSR60	
45 A		PSR45		PSR60		PSR72		PSR85	PSR105		PSR45		PSR60		PSR72	
60 A	PSR60		PSR72	PSR85		PSR105		-	-	PSR60		PSR72		PSR85		PSR105
72 A	PSR72	PSR85		PSR105		-	-	-	-	PSR60		PSR72		PSR85		PSR105
85 A	PSR85		PSR105		-	-	-	-	-	PSR60		PSR72		PSR85		PSR105
105 A	PSR105	-	-	-	-	-	-	-	-	PSR60		PSR72		PSR85		PSR105


Data based on an ambient temperature of 40° (104 F), starting current of 4 x I_s and ramp time 6 seconds.
For more optimized selection or to use PSR for heavy-duty starts, please use the softstarter selection tool.

PSR – The compact range


Dimensions

2


PSR3 ... PSR16

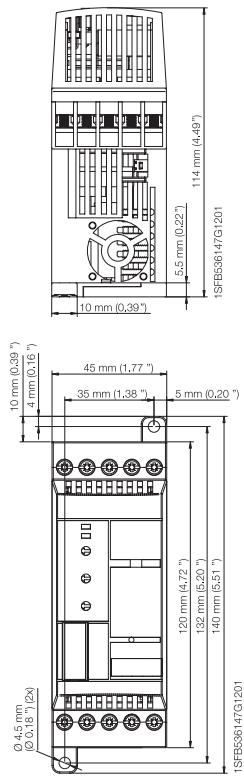


PSR37 ... PSR45

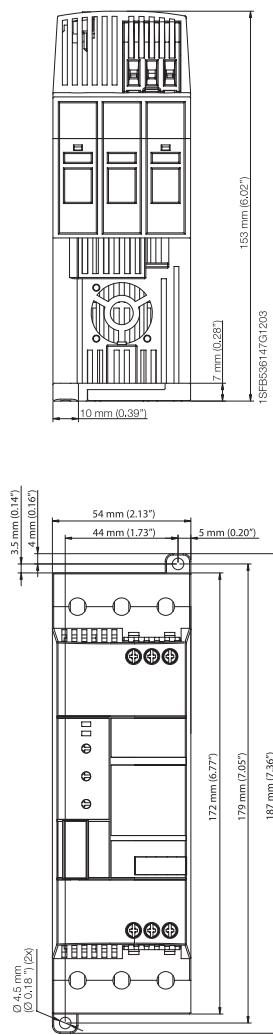

PSR60 ... PSR105

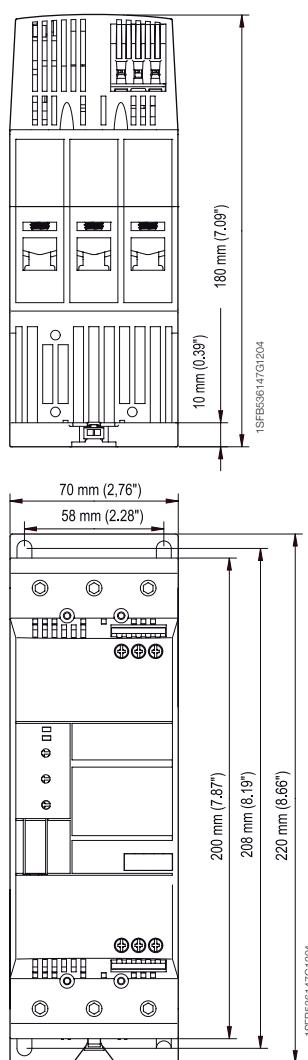

PSR25 ... PSR30

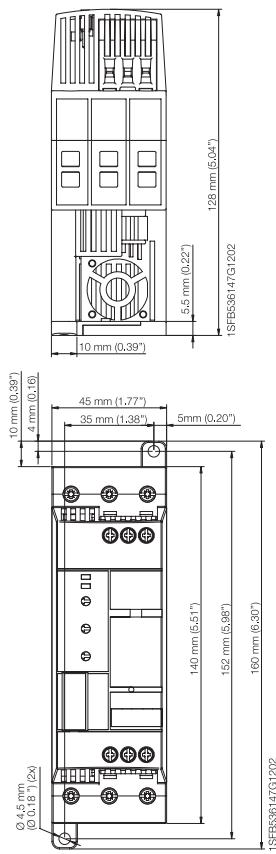


Dimensions in mm (and in)

PSR – The compact range


Circuit diagrams

PSR3 ... PSR16


With MMS

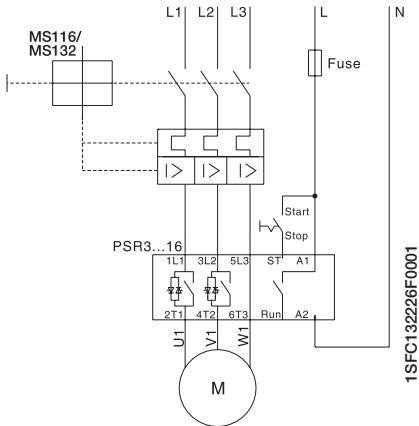

With MMS and auxiliary contact

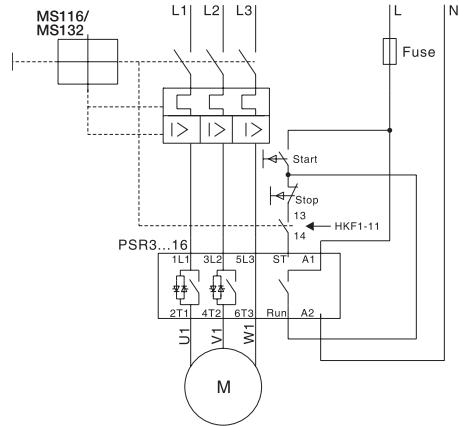


With fuses, contactor and O.L.

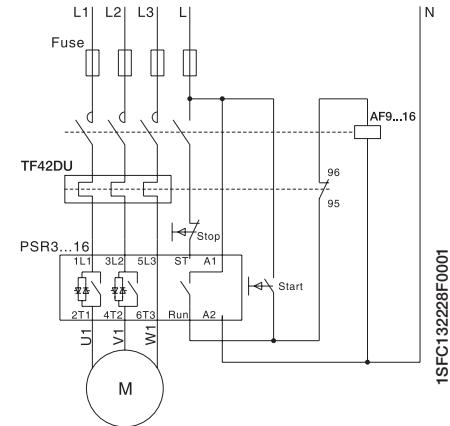


2

PSR25 ... PSR45


With MMS

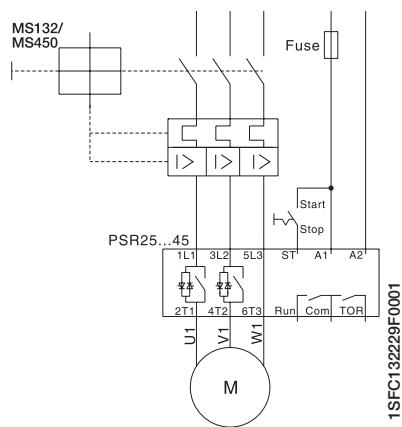

With MMS and auxiliary contact

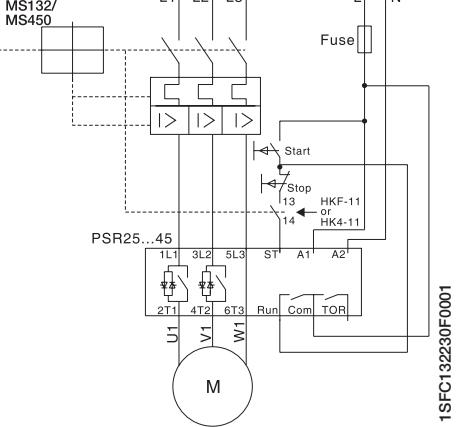


With fuses, contactor and O.L.

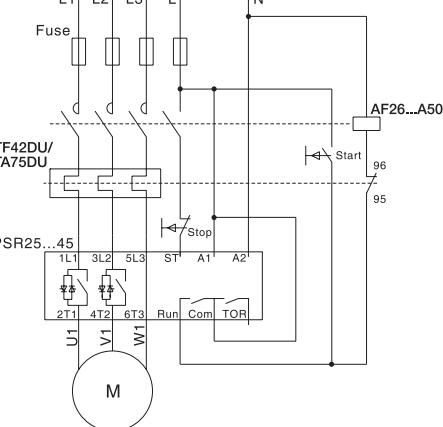


1SFC1322231F0001

PSR60 ... PSR105


With MMS

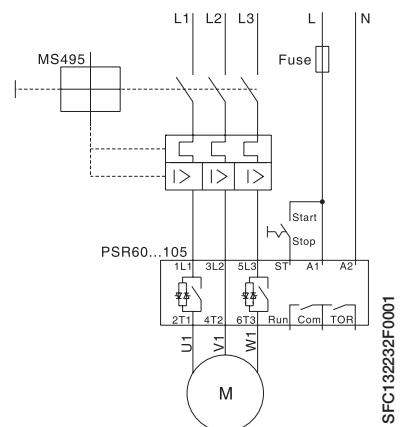

With MMS and auxiliary contact

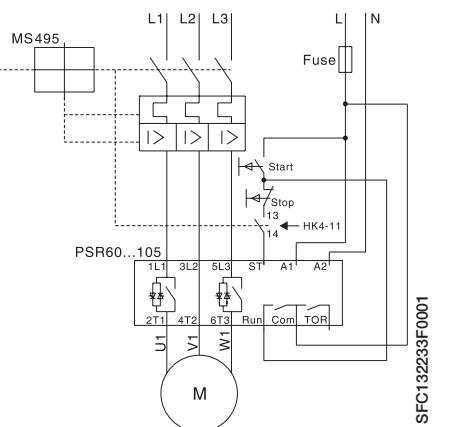

With fuses, contactor and O.L.

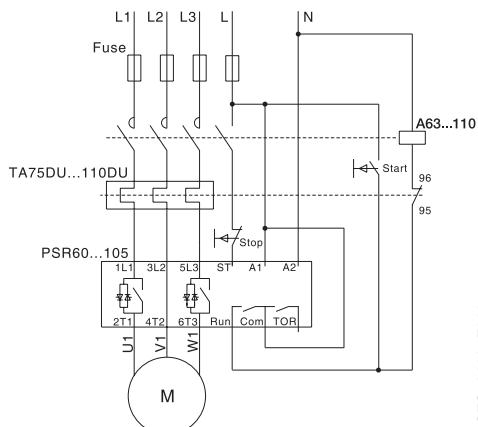

1SFC132234F0001



PSE –The efficient range

PSE – The efficient range

Introduction	3/2
3	
Overview	3/4
Ordering details	3/6
Accessories	3/8
Technical data	3/9
Dimensions	3/12
Circuit diagrams	3/13

3

PSE – The efficient range

Introduction

3



The PSE has been designed to meet the most common requirements from the water segment and is specialized on pump operation. It combines the requested protections with a very compact design and built-in bypass. Remote operation with external keypad or over fieldbus is available as an option.

- Two-phase controlled
- Operational voltage: 208...600 V AC
- Wide rated control supply voltage: 100...250 V AC, 50/60 Hz
- Rated operational current: 18...370 A
- Voltage ramp and torque control for both start and stop
- Current limit
- Kick-start
- Built-in bypass for energy saving and easy installation
- Coated PCBA protecting from dust, moist and corrosive atmosphere
- Illuminated display that uses symbols to become language neutral
- External keypad rated IP66 (Type 1, 4X,12) as an option
- Fieldbus communication with FieldBusPlug adapter and the FieldBusPlug
- Analog output for display of motor current
- Electronic overload protection
- Underload protection
- Locked rotor protection

Secure motor
Reliability

Improve installation
Efficiency

Increase application
Productivity

Basic motor protection and current limit

The PSE includes the most important protections for handling different load situations that can happen to pumps e.g. overload and underload. The current limit gives you more control of the motor during start and allows you to start your motor in weaker networks.

Saving time and money with built-in bypass and compact design

On the PSE, the bypass is built in and verified by ABB, saving you time during installation and space in your panel. The keypad is language neutral and illuminated for easy set-up and operation in field. The compact design makes installation fast and easy.

Torque control for elimination of water hammering in pumps

Torque control is the most efficient way to stop a full speed pump. The PSE has a special torque stop ramp that is designed together with a pump manufacturer to eliminate water hammering in an optimal way.

PSE – The efficient range

Introduction



Screw mounting

PSE is fast easy to install by using screw mounting.

Digital input for start, stop and reset


PSE is controlled through digital inputs using the internal 24 V DC source. This allows easy control with e.g. push buttons or relays.

Output signal relays for run, top of ramp and event

Three output signal relays for indicating that the motor is running, that the softstarter is in top of ramp and if any event has happened. The relays can be used e.g. with pilot lights or to control a line contactor.

Clear markings on the front for easy installation

All markings are on the front making it very easy to read after installation.

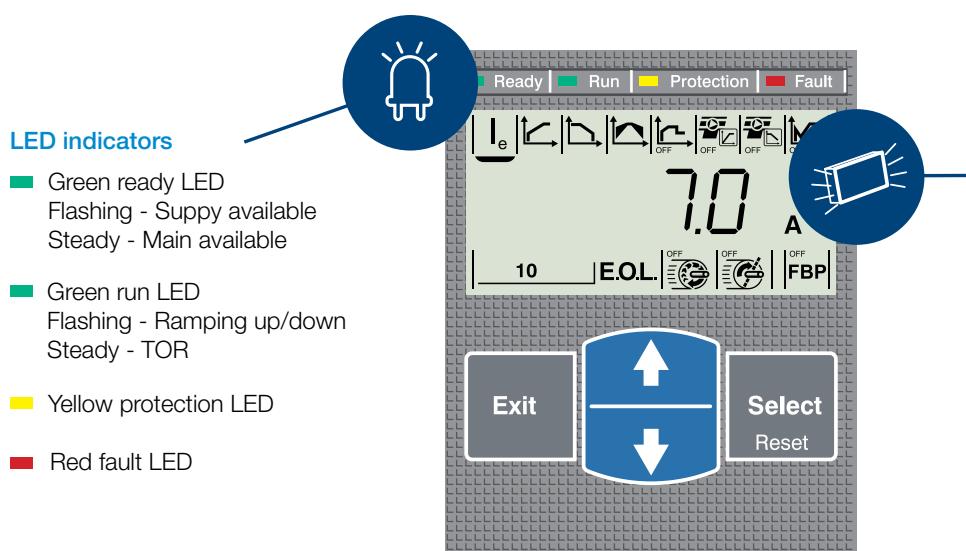

LED indicators

- Green ready LED
Flashing - Supply available
Steady - Main available
- Green run LED
Flashing - Ramping up/down
Steady - TOR
- Yellow protection LED
- Red fault LED

Illuminated and language-neutral display with icons

The display on PSE uses icons for fast and easy set-up of parameters. Each icon indicates a different parameter to set and makes navigation and setting of parameters easy. Set-up is done by using the four buttons on the keypad.

PSE – The efficient range

Overview

3



Normal start In-line connected (400 V) kW	PSE18	PSE25	PSE30	PSE37	PSE45	PSE60	PSE72	PSE85	PSE105
IEC, max. A	7.5	11	15	18.5	22	30	37	45	55
(440-480 V) hp	18	25	30	37	45	60	72	85	106
UL, max. FLA	10	15	20	25	30	40	50	60	75
	18	25	28	34	42	60	68	80	104

400 V, 40 °C									
MCCB (35 kA)									
Using MCCB only, type 1 coordination will be achieved ¹⁾									
T2N160									
MCCB (50 kA)									
T2S160									

To achieve type 2 coordination, semi-conductor fuses must be used ¹⁾	Fuse protection (85 kA), Semiconductor fuses, Bussmann								
	170M1563	170M1564	170M1566	170M1567	170M1568	170M1569	170M1571	170M1572	170M3819
Switch fuse									
OS32GD									
OS63GD									
Line contactor									
AF26									
AF30									
AF38									
AF52									
AF65									
AF80									
AF96									
AF116									

¹⁾ This is an example of coordination. For more examples see: applications.it.abb.com/SOC

PSE – The efficient range

Overview



3

Normal start In-line connected (400 V) kW IEC, max. A (440-480 V) hp UL, max. FLA	PSE142	PSE170	PSE210	PSE250	PSE300	PSE370
75	90	110	132	160	200	
143	171	210	250	300	370	
100	125	150	200	250	300	
130	169	192	248	302	361	
400 V, 40 °C						
MCCB (35 kA)						
Using MCCB only, type 1 coordination will be achieved ¹⁾	T3N250		T4N320		T5N400	
	T3S250		T4S320		T5S400	
Fuse protection (85kA), Semiconductor fuses, Bussmann						
To achieve type 2 coordination, semi-conductor fuses must be used ¹⁾	170M5809	170M5810	170M5812	170M5813	170M6812	170M6813
	Switch fuse					
Suitable switch fuse for recommended semi-conductor fuses ¹⁾	OS400D					OS630D
	Line contactor					
The line contactor is not required for the softstarter itself but often used to open if OL trips ¹⁾	AF140	AF190	AF205	AF265	AF305	AF370

¹⁾ This is an example of coordination. For more examples see: applications.it.abb.com/SOC

PSE – The efficient range

Normal starts, class 10, in-line, ordering details



PSE18 ... PSE105

- ## Description

Selection table for normal start. Typical applications:

- Bow thruster
 - Centrifugal pump
 - Compressor
 - Conveyorbelt (short)
 - Elevator
 - Escalator

If more than 10 starts/h, select one size larger than the standard selection.



PSE142 ... PSE170

1SFC132312F0002



PSE210 ... PSE370

1SFC132310F0002

Rated operational voltage U_e , 208...600 V

Rated control supply voltage U_s , 100...250 V AC, 50/60 Hz

IEC				UL/CSA								Type	Order code		Weight (1 pce)	
Rated operational power				Rated operational power												
230 V	400 V	500 V	current	200 / 208 V	220 / 240 V	440 / 480 V	550 / 600 V	FLA								
P _e kW	P _e kW	P _e kW	I _e A	P _e hp	P _e hp	P _e hp	P _e hp	A					kg	(lb)		
4	7.5	11	18	5	5	10	15	18	PSE18-600-70	1SFA897101R7000			2.40	(5.29)		
5.5	11	15	25	7.5	7.5	15	20	25	PSE25-600-70	1SFA897102R7000			2.40	(5.29)		
7.5	15	18.5	30	7.5	10	20	25	28	PSE30-600-70	1SFA897103R7000			2.40	(5.29)		
9	18.5	22	37	10	10	25	30	34	PSE37-600-70	1SFA897104R7000			2.40	(5.29)		
11	22	30	45	10	15	30	40	42	PSE45-600-70	1SFA897105R7000			2.40	(5.29)		
15	30	37	60	20	20	40	50	60	PSE60-600-70	1SFA897106R7000			2.40	(5.29)		
18.5	37	45	72	20	25	50	60	68	PSE72-600-70	1SFA897107R7000			2.50	(5.51)		
22	45	55	85	25	30	60	75	80	PSE85-600-70	1SFA897108R7000			2.50	(5.51)		
30	55	75	106	30	40	75	100	104	PSE105-600-70	1SFA897109R7000			2.50	(5.51)		
40	75	90	143	40	50	100	125	130	PSE142-600-70	1SFA897110R7000			4.20	(9.26)		
45	90	110	171	60	60	125	150	169	PSE170-600-70	1SFA897111R7000			4.20	(9.26)		
59	110	132	210	60	75	150	200	192	PSE210-600-70	1SFA897112R7000			12.40	(27.34)		
75	132	160	250	75	100	200	250	248	PSE250-600-70	1SFA897113R7000			13.90	(30.64)		
90	160	200	300	100	100	250	300	302	PSE300-600-70	1SFA897114R7000			13.90	(30.64)		
110	200	250	370	125	150	300	350	361	PSE370-600-70	1SFA897115R7000			13.90	(30.64)		

PSE – The efficient range

Heavy-duty starts, class 30, in-line, ordering details



PSE18 ... PSE105

Description

Selection table for heavy-duty start. Typical applications:

- Centrifugal fan
- Conveyor belt (long)
- Crusher
- Mill
- Mixer
- Stirrer

If more than 10 starts/h, select one size larger than the standard selection.



3

For a more precise selection, use the online softstarter selection tool available by scanning the shown QR code or using the selection tool available on:

new.abb.com/low-voltage/products/softstarters



PSE142 ... PSE170



PSE210 ... PSE370

Rated operational voltage Ue, 208-600 V

Rated control supply voltage Us, 100-250 V AC, 50/60 Hz

IEC				UL/CSA				Type	Order code	Weight (1 pce)	
Rated operational power			current	Rated operational power			current				
230 V	400 V	500 V		200 / 208 V	220 / 240 V	440 / 480 V	550 / 600 V	FLA			
P _e kW	P _e kW	P _e kW	I _e A	P _e hp	P _e hp	P _e hp	P _e hp	A			
3	5.5	7.5	12	5	5	10	15	18	PSE18-600-70	1SFA897101R7000	2.40 (5.29)
4	7.5	11	18	7.5	7.5	15	20	25	PSE25-600-70	1SFA897102R7000	2.40 (5.29)
5.5	11	15	25	7.5	10	20	25	28	PSE30-600-70	1SFA897103R7000	2.40 (5.29)
7.5	15	18.5	30	10	10	25	30	34	PSE37-600-70	1SFA897104R7000	2.40 (5.29)
9	18.5	22	37	10	15	30	40	42	PSE45-600-70	1SFA897105R7000	2.40 (5.29)
11	22	30	45	20	20	40	50	60	PSE60-600-70	1SFA897106R7000	2.40 (5.29)
15	30	37	60	20	25	50	60	68	PSE72-600-70	1SFA897107R7000	2.50 (5.51)
18.5	37	45	72	25	30	60	75	80	PSE85-600-70	1SFA897108R7000	2.50 (5.51)
22	45	55	85	30	40	75	100	104	PSE105-600-70	1SFA897109R7000	2.50 (5.51)
30	55	75	106	40	50	100	125	130	PSE142-600-70	1SFA897110R7000	4.20 (9.26)
40	75	90	143	60	60	125	150	169	PSE170-600-70	1SFA897111R7000	4.20 (9.26)
45	90	110	171	60	75	150	200	192	PSE210-600-70	1SFA897112R7000	12.40 (27.34)
59	110	132	210	75	100	200	250	248	PSE250-600-70	1SFA897113R7000	13.90 (30.64)
75	132	160	250	100	100	250	300	302	PSE300-600-70	1SFA897114R7000	13.90 (30.64)
90	160	200	300	125	150	300	350	361	PSE370-600-70	1SFA897115R7000	13.90 (30.64)

PSE – The efficient range

Accessories



1SF98099-095C2



SB805C2

LZ...




1SF98099-011C1



1SF98099-011C3

LW...

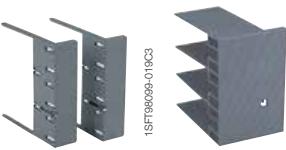

1SF98099-019C3

LT ... -AC

LT ... -AL

1SF98099-125



1SFC132328F002

PSEEK



1SFC132355F002

PSECA



1SFC132168F0001

PS-FBPA

For softstarter type	Wire range mm ²	Tightening torque max. Nm	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Cable connectors for Cu cables						
PSE142 ... PSE170	6...120	14	-	1SDA066917R1	3	0.113 (0.249)
PSE142 ... PSE170	2 x (50...120)	16	LZ185-2C/120	1SFN074709R1000	3	0.100 (0.220)
PSE210 ... PSE370	16...300	25	-	1SDA055016R1	3	0.133 (0.293)

For softstarter type	Wire range mm ²	Tightening torque max. Nm	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Cable connectors for AI and Cu cables						
PSE142 ... PSE170	95...185	31	-	1SDA054988R1	3	0.078 (0.172)
PSE210 ... PSE370	185...240	43	-	1SDA055020R1	3	0.133 (0.293)

For softstarter type	Dimensions hole ø mm ²	bar mm ²	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Terminal enlargements						
PSE18 ... PSE105	6.5	15 x 3	LW110	1SFN074307R1000	1	0.100 (0.220)
PSE142 ... PSE170	10.5	17.5 x 5	LW185	1SFN074707R1000	1	0.450 (0.992)
PSE210 ... PSE370	10.5	20 x 5	LW300	1SFN075107R1000	1	1.230 (2.712)

For softstarter type	Req. qty	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Terminal shrouds					
PSE142 ... PSE170, short for use with cable clamps	2	LT185-AC	1SFN124701R1000	2	0.050 (0.110)
PSE142 ... PSE170, long for use with compression lugs	2	LT185-AL	1SFN124703R1000	2	0.220 (0.485)
PSE210 ... PSE370, short for use with cable clamps	2	LT300-AC	1SFN125101R1000	2	0.070 (0.154)
PSE210 ... PSE370, long for use with compression lugs	2	LT300-AL	1SFN125103R1000	2	0.280 (0.617)

For softstarter type	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
External keypad including a 3m cable				
PSE18 ... PSE370	PSEEK	1SFA897100R1001	1	0.198 (0.437)

For softstarter type	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
USB cable for Service Engineer Tool				
PSE18 ... PSE370	PSECA	1SFA897201R1001	1	0.130 (0.287)

For softstarter type	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
FieldBusPlug connection accessory				
PSE18 ... PSE370	PS-FBPA	1SFA896312R1002	1	0.060 (0.132)


PSE – The efficient range

Technical data

Tripping curves for the integrated electronic overload protection

PSE has an integrated electronic overload protection that can be set to four different tripping classes.

Below you find a curve for each tripping class in cold state.

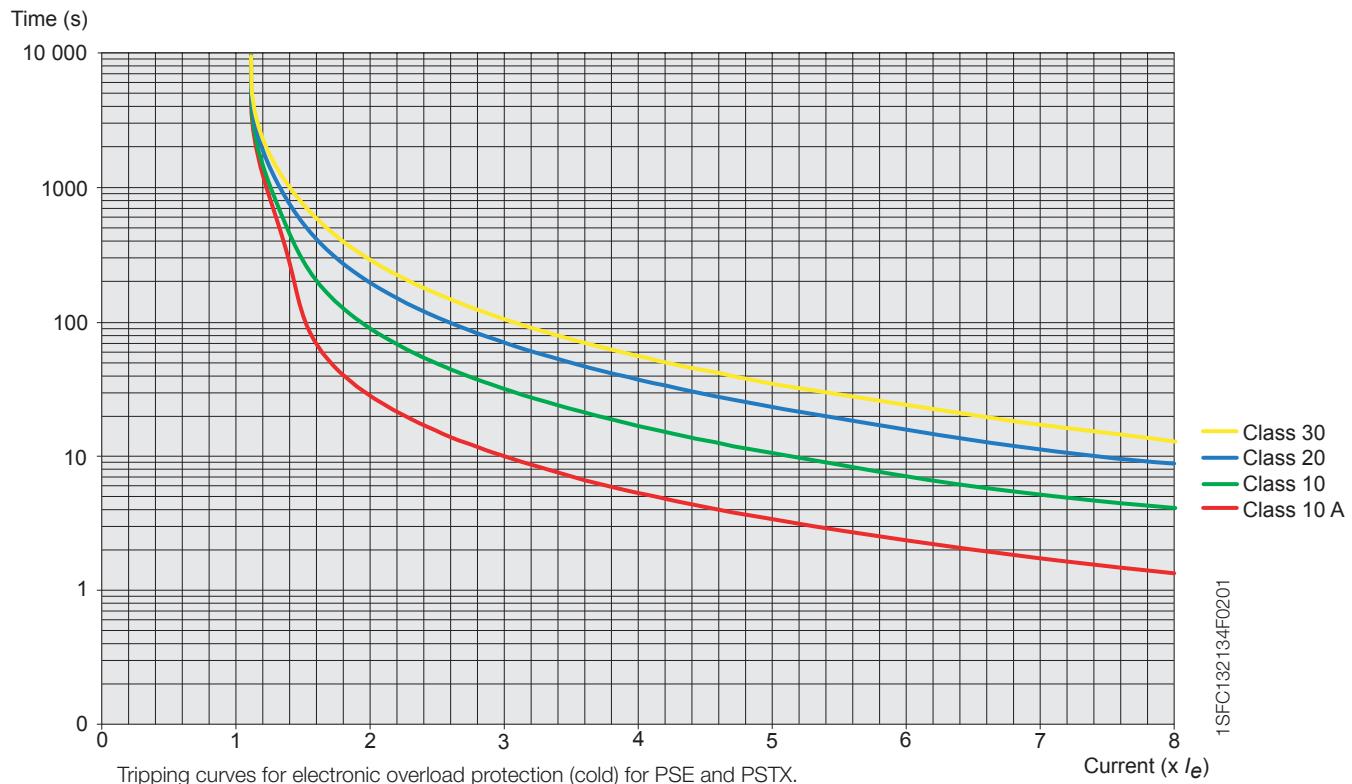

PSE – The efficient range

Technical data

3

	PSE18 ... PSE370
Rated insulation voltage U_i	600 V
Rated operational voltage U_e	208...600 V +10%/-15%
Rated control supply voltage U_s	100...250 V +10%/-15%, 50/60 Hz ±5 %
Rated control circuit voltage U_c	Internal 24 V DC
Starting capacity at I_e	$4 \times I_e$ for 10 sec.
Number of starts per hour	10^{11}
Overload capability	Overload class 10
Ambient temperature	During operation -25...+60 °C (-13...+140 F) ²⁾ During storage -40...+70 °C (-40...+158 F)
Maximum Altitude	4000 m (13123 ft) ³⁾
Degree of protection	Main circuit IP00 Supply and control circuit IP20
Main circuit	Built-in bypass Yes Cooling system - fan cooled (thermostat controlled) Yes
HMI for settings	Display 4 7-segments and icons. Illuminated Keypad 2 selection keys and 2 navigation keys
Main settings	Setting current Size dependent Ramp time during start 1...30 sec Ramp time during stop 0...30 sec Initial/end voltage 30...70% Current limit $1.5 \dots 7 \times I_e$ Torque control for start Yes / No Torque control for stop Yes / No Kick start Off, 30...100%
Signal relays	Number of signal relays 3 K2 Run signal K3 TOR (bypass) signal K1 Event signal Rated operational voltage U_e 250 V AC/24 V DC ⁴⁾ Rated thermal current I_{th} 3 A Rated operational current I_e at AC-15 ($U_e = 250$ V) 1.5 A
Analog output	Output signal reference 4...20 mA Type of output signal 1 Amp Scaling Fixed at $1.2 \times I_e$
Control circuit	Number of inputs 3 (start, stop, reset of faults)
Signal indication LED	On / Ready Green flashing / steady Run / TOR Green flashing / steady Protection Yellow Fault Red
Protections	Electronic overload Yes (Class 10A, 10, 20, 30) Locked rotor protection Yes Underload protection Yes
Fieldbus connection	Connection for ABB FieldBusPlug Yes (option)
External keypad	Display LCD type Ambient temperature During operation -25...+60 °C (-13...+140 F) During storage -40...+70 °C (-40...+158 F) Degree of protection IP66

¹⁾ Valid for 50% on time and 50% off time. If other data is required, contact your local ABB office.

²⁾ Above 40 °C (104 F) up to max. 60 °C (140 F) reduce the rated current with 0.6% per °C (0.33% per F).

³⁾ When used at high altitudes, above 1000 meters (3281 ft) up to 4000 meters (13123 ft), de-rate the rated current using

the following formula. [% of $I_e = 100 - \frac{x-1000}{1000}$] x = actual altitude of the softstarter in meters. [% of $I_e = 100 - \frac{y-3280}{3280}$] y = actual altitude of the softstarter in feet.

PSE – The efficient range

Technical data

Main terminals	PSE18 ... PSE105	PSE142 ... PSE170	PSE210 ... PSE370
Cu cable - Flexible Clamp type Tightening torque	1 x mm ² 2.5...70 mm ² Included 8 Nm	2.5...70 mm ² Included 8 Nm	6...120 mm ² 14 Nm 1SDA066917R1
Cu cable - Flexible Clamp type Tightening torque	2 x mm ² 2.5...70 mm ² Included 8 Nm	2.5...70 mm ² Included 8 Nm	50...120 mm ² 14 NM 1SFN074709R1000
Cu cable - Stranded Clamp type Tightening torque	1 x mm ² 2.5...70 mm ² Included 8 Nm	2.5...70 mm ² Included 8 Nm	6...120 mm ² 14 NM 1SDA066917R1
Cu cable - Stranded Clamp type Tightening torque	2 x mm ² 2.5...70 mm ² Included 8 Nm	2.5...70 mm ² Included 8 Nm	50...120 mm ² 16 NM 1SFN074709R1000
Al cable - Stranded Clamp type Tightening torque	1 x mm ² - - - Width Diameter>=	- - - 22 mm (0.866 in) 6.5 mm (0.256 in)	95...185 mm ² 185...240 1SDA054988R1 31 NM 24 mm (0.945 in) 8.5 mm (0.335 in)
Lugs Tightening torque	2 x mm ² - - - - 9 Nm (80 in lb)	30 mm (1.181 in) 10.2 mm (0.402 in) 28 Nm (248 in lb)	
Connection capacity acc to UL / CSA 1 x AWG / kcmil	6...2/0	6...300 kcmil	4...400 kcmil
Clamp type Tightening torque	Included 71 in lb	ATK185 300 in lb	ATK300 375 in lb
Connection capacity acc to UL / CSA 2 x AWG / kcmil	-	-	4...500 kcmil
Supply and control circuit	Clamp type Tightening torque	- -	ATK300/2 375 in lb
Cu cable - Stranded Cu cable - Stranded Tightening torque	1 x mm ² 2 x mm ² - 0.75...2.5 mm ² (19...14 AWG)	0.75...1.5 mm ² (19...16 AWG) 0.5 Nm (4.4 in lb)	

3

Fuse ratings and power losses


For softstarter	Current range	Max power loss at rated I _e	Max fuse rating - main circuit ¹⁾			Power requirements supply circuit Holding (VA) / Pull-in (VA)
			A	Type	Size	
PSE18	5.4...18.0	0.2	40	170M1563	000	16/19.9
PSE25	7.5...25.0	0.4	50	170M1564	000	16/19.9
PSE30	9.0...30.0	0.5	80	170M1566	000	16/19.9
PSE37	11.1...37.0	0.8	100	170M1567	000	16/19.9
PSE45	13.5...45.0	1.2	125	170M1568	000	16/19.9
PSE60	18.0...60.0	2.2	160	170M1569	000	16/19.9
PSE72	21.6...72.0	3.1	250	170M1571	000	16/19.9
PSE85	25.5...85.0	4.3	315	170M1572	000	16/19.9
PSE105	31.8...106.0	6.6	400	170M3819	1*	16/19.9
PSE142	42.9...143.0	12.1	450	170M5809	2	16/31
PSE170	51.3...171.0	17.6	500	170M5810	2	16/31
PSE210	63.0...210.0	8.8	630	170M5812	2	30/700
PSE250	75.0...250.0	12.5	700	170M5813	2	30/700
PSE300	90.6...302.0	18.0	800	170M6812	3	30/700
PSE370	111.0...370.0	27.4	900	170M6813	3	30/700

¹⁾ For the supply circuit 6 A delayed, for MCB use C characteristics.


PSE – The efficient range Dimensions

3


PSE18 ... PSE105

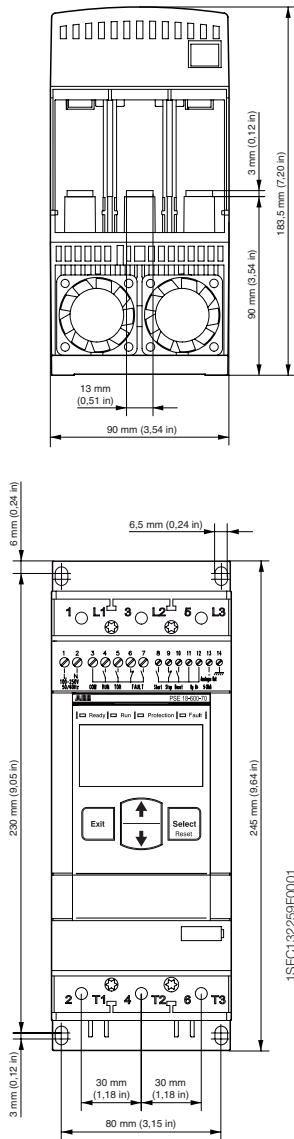



PSE142 ... PSE170

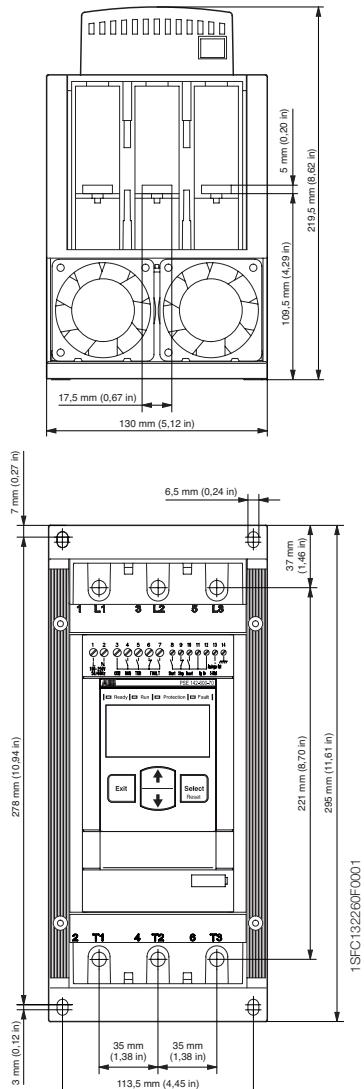

PSE210 ... PSE370

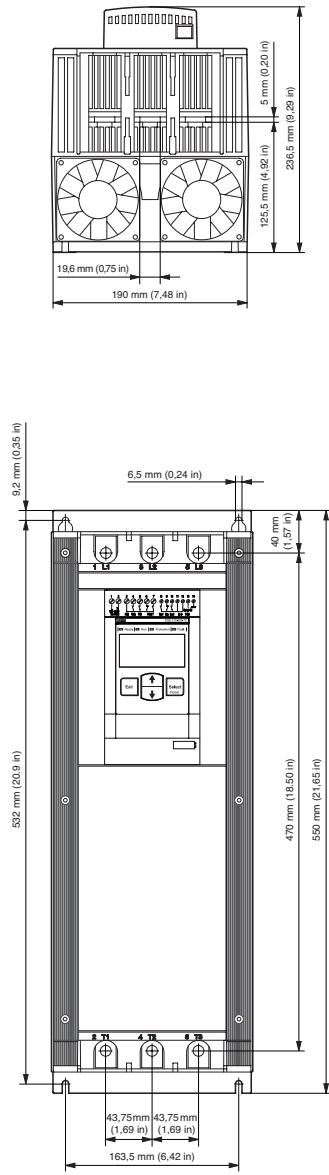


PSE external keypad (PSEEK)

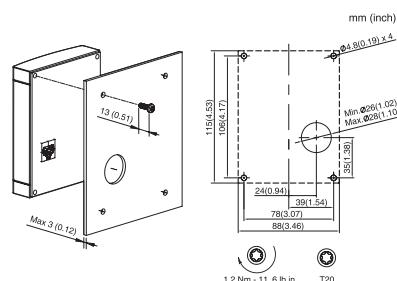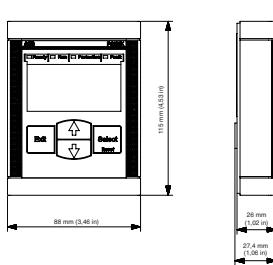


PSE – The efficient range

Circuit diagrams

PSE18 ... PSE370
With MCCB and line contactor

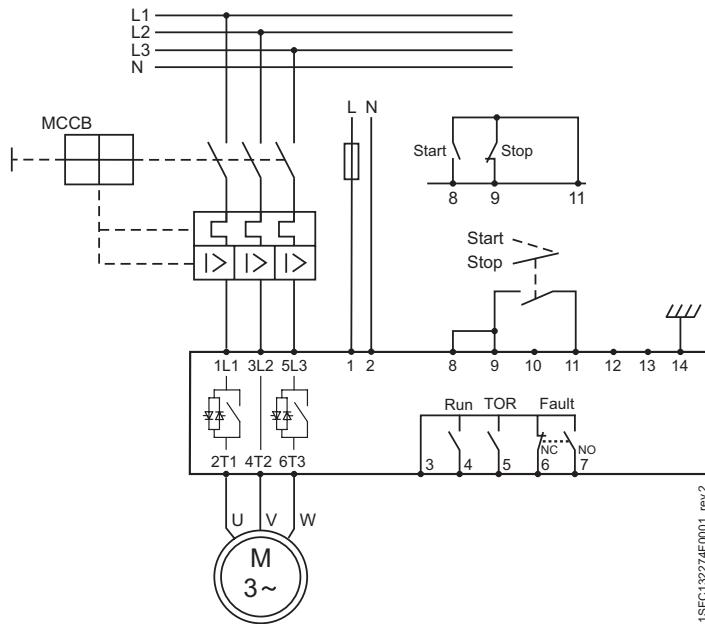

With fuses and line contactor

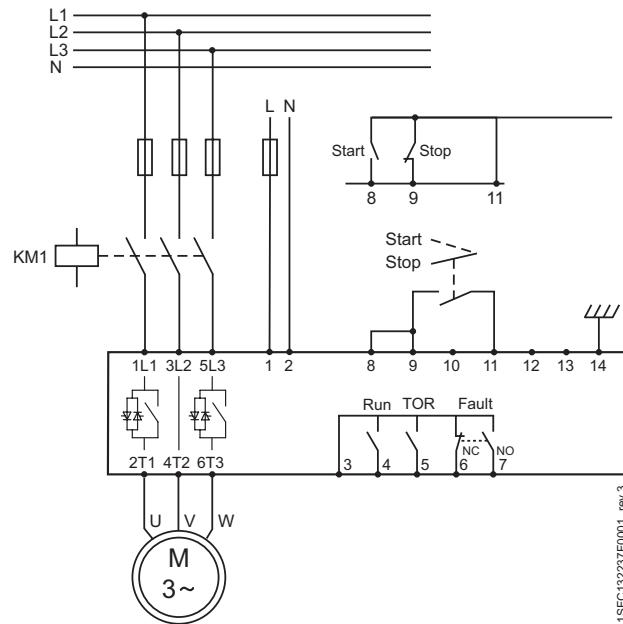



PSTX – The advanced range

PSTX – The advanced range

Introduction	4/2
Overview	4/4
Ordering details	4/6
Accessories	4/10
Technical data	4/11
Dimensions	4/16
Circuit diagrams	4/18

4

PSTX – The advanced range

Introduction

4



The PSTX combines many years of research and product development with extensive knowledge of application specific requirements and needs. It is our latest advancement in motor control and protection and adds new functionality and increased reliability.

- Three-phase controlled
- Operational voltage: 208...690 VAC
- Wide rated control supply voltage: 100...250 V, 50/60 Hz
- PSTX Rated operational current: 30...1250 A (inside-delta: 2160 A)
- Both in-line and inside-delta connection
- Coated circuit boards protecting from dust, moist and corrosive atmosphere
- Detachable keypad rated IP66 (Type 1, 4X,12)
- Graphical display with 16 languages for easy setup and operation
- Built-in bypass for energy saving and easy installation
- Built-in Modbus RTU for monitoring and control
- Support for all major communication protocols
- Analog output for measurement of current, voltage, power factor etc.

Secure motor Reliability

Improve installation Efficiency

Increase application Productivity

Complete motor protection

The PSTX offers complete motor protection in only one unit and is able to handle both load and network irregularities. PT-100, earth fault protection and over/under voltage protection along with many other functions keep your motor safer than ever.

Three types of current limit

PSTX offers three types of current limit: standard, dual and ramp. This gives you full control of your motor during start. It also allows you to use your motor in weaker networks.

Built-in bypass saves time and energy

When reaching full speed, the PSTX will activate its bypass. This saves energy while reducing the softstarter's heat generation. On the PSTX, the bypass is built in and verified by ABB, saving you time during installation and space in your panel.

Easy-to-use and detachable keypad

A user-friendly and clear display saves you time and resources during both setup and operation. The detachable keypad is standard on all PSTX softstarters.

Complete control of pumps

Time to use your processes to their full potential. The PSTX features many application enhancing features, including torque control: the most efficient way to start and stop pumps. The pump cleaning feature can reverse pump flow and clean out pipes, securing uptime of your pump system.

Jog with slow speed

The slow speed forward and backward jog feature will make you more flexible when operating e.g. conveyor belts and cranes. The PSTX provides positioning capabilities, letting you take control of your process.

PSTX – The advanced range

Introduction



Keyhole mounting for quick installation

The PSTX is simple and quick to install using keyhole mounting, saving you valuable time during the installation.

A compact motor starting solution

When your application reaches full speed, a bypass will reduce the softstarter's energy consumption. It also reduces heat generation which means you can save money by reducing the need of added cooling equipment. On the PSTX, the bypass is built in and verified by ABB.

Clear markings on the front

With the PSTX, you do not need a manual to handle control circuit connections. With the self-explanatory markings on the front you can verify that the connections are done right. And with basic data on the front, identification is simple without having to take the product down.

Customizable

The PSTX has 17 pre-installed languages along with options to customize your own specific home screens (up to seven different). You can use your customized home screens to show status information important to your process – and hide information that is not.



Easy to learn

A large graphical display along with built-in assistants make learning how to handle the PSTX fun and simple. The interface resembles other interfaces from ABB which will streamline and help with training of field personnel.

Detachable

The PSTX comes with a detachable keypad as standard. It can be placed on your panel door, meaning you do not have to interrupt your process in order to read status information or to change settings.

PSTX – The advanced range

Overview



4

Normal start In-Line connected (400 V) kW	PSTX30	PSTX37	PSTX45	PSTX60	PSTX72	PSTX85	PSTX105	PSTX142	PSTX170
15	18.5	22	30	37	45	55	75	90	
30	37	45	60	72	85	106	143	171	
20	25	30	40	50	60	75	100	125	
UL, max. FLA	28	34	42	60	68	80	104	130	169

400 V, 40 °C

Using manual motor
starter or MCCB, type
1 coordination will be
achieved.¹⁾

MCCB (50 kA)

XT2S160

XT4S250

Using gG fuses, type
1 coordination will be
achieved. To achieve
type 2 coordination,
semiconductor fuses
must be used.¹⁾

Fuse protection (80 kA), Semiconductor fuses, Bussmann

170M1567	170M1568	170M1569	170M1571	170M1572	170M3819	170M5810	170M5812
----------	----------	----------	----------	----------	----------	----------	----------

Suitable switch fuse for the
recommended semiconductor
fuses.¹⁾

Switch fuse

OS32G	OS63G	OS125G	OS250	OS400
-------	-------	--------	-------	-------

The line contactor is not
required for the softstarter
itself but often used to open
if OL trips¹⁾

Line contactor

AF30	AF38	AF52	AF65	AF80	AF96	AF116	AF140	AF190
------	------	------	------	------	------	-------	-------	-------

¹⁾ This is an example of coordination. For more examples see: applications.it.abb.com/SOC

PSTX – The advanced range

Overview



Normal start In-Line connected	PSTX210	PSTX250	PSTX300	PSTX370	PSTX470	PSTX570	PSTX720	PSTX840	PSTX1050	PSTX1250
(400 V) kW	110	132	160	200	250	315	400	450	560	710
IEC, max. A	210	250	300	370	470	570	720	840	1050	1250
(440-480 V) hp	150	200	250	300	400	500	600	700	900	1000
UL, max. FLA	192	248	302	361	480	590	720	840	1062	1250

400 V, 40 °C

Using manual motor starter or MCCB, type 1 coordination will be achieved. ¹⁾	MCCB (50 kA)					
	T4S320	T5S400	T5S630	T7S800	T7S1250	E2.2N 2000

Using gG fuses, type 1 coordination will be achieved. To achieve type 2 coordination, semiconductor fuses must be used. ¹⁾	Fuse protection (80 kA), Semiconductor fuses, Bussmann								
	170M5812	170M5813	170M6812	170M6813	170M6814	170M8554	170M6018	170M6020	170M6021

Suitable switch fuse for the recommended semiconductor fuses. ¹⁾	Switch fuse								
	OS400		OS630		OS800		-	-	-

The line contactor is not required for the softstarter itself but often used to open if OL trips. ¹⁾	Line contactor									-
	AF205	AF265	AF305	AF370	AF460	AF580	AF750	AF1350	AF1650	-

¹⁾ This is an example of coordination. For more examples see: applications.it.abb.com/SOC

PSTX – The advanced range

Normal starts, class 10, in-line, ordering details



PSTX30 ... PSTX105



PSTX142 ... PSTX170



PSTX210 ... PSTX370



PSTX470 ... PSTX570



PSTX720 ... PSTX840



PSTX1050 ... PSTX1250

Description

Selection table for normal start. Typical applications:

- Bow thruster
- Centrifugal pump
- Compressor
- Conveyor belt (short)
- Elevator



For a more precise selection, use the online softstarter selection tool available by scanning the shown QR code or using the selection tool available on:

new.abb.com/low-voltage/products/softstarters

4

Rated operational voltage U_e, 208...600 V

Rated control supply voltage U_s, 100...250 V AC, 50/60 Hz

IEC				UL/CSA				Type	Order code	Weight (1 pce)	
Rated operational power		current	Rated operational power		current						
400 V	500 V	690 V	P _e	P _e	P _e	le	hp	hp	hp	FLA	
kW	kW	kW	A	Pe	Pe	Pe	hp	hp	hp	A	
15	18.5	-	30	7.5	10	20	25	28	PSTX30-600-70	ISFA898103R7000	6.10 (13.45)
18.5	22	-	37	10	10	25	30	34	PSTX37-600-70	ISFA898104R7000	6.10 (13.45)
22	25	-	45	10	15	30	40	42	PSTX45-600-70	ISFA898105R7000	6.10 (13.45)
30	37	-	60	20	20	40	50	60	PSTX60-600-70	ISFA898106R7000	6.10 (13.45)
37	45	-	72	20	25	50	60	68	PSTX72-600-70	ISFA898107R7000	6.10 (13.45)
45	55	-	85	25	30	60	75	80	PSTX85-600-70	ISFA898108R7000	6.10 (13.45)
55	75	-	106	30	40	75	100	104	PSTX105-600-70	ISFA898109R7000	6.10 (13.45)
75	90	-	143	40	50	100	125	130	PSTX142-600-70	ISFA898110R7000	9.60 (21.16)
90	110	-	171	50	60	125	150	169	PSTX170-600-70	ISFA898111R7000	9.60 (21.16)
110	132	-	210	60	75	150	200	192	PSTX210-600-70	ISFA898112R7000	12.70 (27.99)
132	160	-	250	75	100	200	250	248	PSTX250-600-70	ISFA898113R7000	12.70 (27.99)
160	200	-	300	100	100	250	300	302	PSTX300-600-70	ISFA898114R7000	12.70 (27.99)
200	257	-	370	125	150	300	350	361	PSTX370-600-70	ISFA898115R7000	12.70 (27.99)
250	315	-	470	150	200	400	500	480	PSTX470-600-70	ISFA898116R7000	25.00 (55.12)
315	400	-	570	200	200	500	600	590	PSTX570-600-70	ISFA898117R7000	25.00 (55.12)
400	500	-	720	250	300	600	700	720	PSTX720-600-70	ISFA898118R7000	46.20 (101.85)
450	600	-	840	300	350	700	800	840	PSTX840-600-70	ISFA898119R7000	46.20 (101.85)
560	730	-	1050	400	450	900	1000	1062	PSTX1050-600-70	ISFA898120R7000	64.20 (141.54)
710	880	-	1200	400	500	1000	1200	1250	PSTX1250-600-70	ISFA898121R7000	64.70 (142.64)

Rated operational voltage U_e, 208...690 V

Rated control supply voltage U_s, 100...250 V AC, 50/60 Hz

15	18.5	25	30	7.5	10	20	25	28	PSTX30-690-70	ISFA898203R7000	6.10 (13.45)
18.5	22	30	37	10	10	25	30	34	PSTX37-690-70	ISFA898204R7000	6.10 (13.45)
22	25	37	45	10	15	30	40	42	PSTX45-690-70	ISFA898205R7000	6.10 (13.45)
30	37	55	60	20	20	40	50	60	PSTX60-690-70	ISFA898206R7000	6.10 (13.45)
37	45	59	72	20	25	50	60	68	PSTX72-690-70	ISFA898207R7000	6.10 (13.45)
45	55	75	85	25	30	60	75	80	PSTX85-690-70	ISFA898208R7000	6.10 (13.45)
55	75	90	106	30	40	75	100	104	PSTX105-690-70	ISFA898209R7000	6.10 (13.45)
75	90	132	143	40	50	100	125	130	PSTX142-690-70	ISFA898210R7000	9.60 (21.16)
90	110	160	171	50	60	125	150	169	PSTX170-690-70	ISFA898211R7000	9.60 (21.16)
110	132	184	210	60	75	150	200	192	PSTX210-690-70	ISFA898212R7000	12.70 (27.99)
132	160	220	250	75	100	200	250	248	PSTX250-690-70	ISFA898213R7000	12.70 (27.99)
160	200	257	300	100	100	250	300	302	PSTX300-690-70	ISFA898214R7000	12.70 (27.99)
200	257	355	370	125	150	300	350	361	PSTX370-690-70	ISFA898215R7000	12.70 (27.99)
250	315	450	470	150	200	400	500	480	PSTX470-690-70	ISFA898216R7000	25.00 (55.12)
315	400	560	570	200	200	500	600	590	PSTX570-690-70	ISFA898217R7000	25.00 (55.12)
400	500	710	720	250	300	600	700	720	PSTX720-690-70	ISFA898218R7000	46.20 (101.85)
450	600	800	840	300	350	700	800	840	PSTX840-690-70	ISFA898219R7000	46.20 (101.85)
560	730	1000	1050	400	450	900	1000	1062	PSTX1050-690-70	ISFA898220R7000	64.20 (141.54)
710	880	1200	1250	400	500	1000	1200	1250	PSTX1250-690-70	ISFA898221R7000	64.70 (142.64)

PSTX – The advanced range

Heavy-duty, class 30, in-line, ordering details



PSTX30 ... PSTX105

Description

Selection table for heavy-duty start. Typical applications:

- Centrifugal fan
- Conveyor belt (long)
- Crusher
- Mill
- Mixer
- Stirrer



PSTX142 ... PSTX170



PSTX210 ... PSTX370



PSTX470 ... PSTX570



PSTX720 ... PSTX840



PSTX1050 ... PSTX1250

For a more precise selection, use the online softstarter selection tool available by scanning the shown QR code or using the selection tool available on:

new.abb.com/low-voltage/products/softstarters

4

Rated operational voltage U_e, 208...600 V

Rated control supply voltage U_s, 100...250 V AC, 50/60 Hz

IEC				UL/CSA				Type	Order code	Weight (1 pce)		
Rated operational power		current		Rated operational power		current				kg	(lb)	
400 V	500 V	690 V		200 / 208 V	220 / 240 V	440 / 480 V	550 / 600 V	FLA				
P _e kW	P _e kW	P _e kW	I _e A	P _e hp	P _e hp	P _e hp	P _e hp	A				
11	15	-	22	5	7.5	15	20	25	PSTX30-600-70	1SFA898103R7000	6.10	(13.45)
15	18.5	-	30	7.5	10	20	25	28	PSTX37-600-70	1SFA898104R7000	6.10	(13.45)
18.5	22	-	37	10	10	25	30	34	PSTX45-600-70	1SFA898105R7000	6.10	(13.45)
22	25	-	45	10	15	30	40	42	PSTX60-600-70	1SFA898106R7000	6.10	(13.45)
30	37	-	60	20	20	40	50	60	PSTX72-600-70	1SFA898107R7000	6.10	(13.45)
37	45	-	72	20	25	50	60	68	PSTX85-600-70	1SFA898108R7000	6.10	(13.45)
45	55	-	85	25	30	60	75	80	PSTX105-600-70	1SFA898109R7000	6.10	(13.45)
55	75	-	106	30	40	75	100	104	PSTX142-600-70	1SFA898110R7000	9.60	(21.16)
75	90	-	143	40	50	100	125	130	PSTX170-600-70	1SFA898111R7000	9.60	(21.16)
90	110	-	171	50	60	125	150	169	PSTX210-600-70	1SFA898112R7000	12.70	(27.99)
110	132	-	210	60	75	150	200	192	PSTX250-600-70	1SFA898113R7000	12.70	(27.99)
132	160	-	250	75	100	200	250	248	PSTX300-600-70	1SFA898114R7000	12.70	(27.99)
160	200	-	300	100	100	250	300	302	PSTX370-600-70	1SFA898115R7000	12.70	(27.99)
200	257	-	370	125	150	300	350	361	PSTX470-600-70	1SFA898116R7000	25.00	(55.12)
250	315	-	470	150	200	400	500	480	PSTX570-600-70	1SFA898117R7000	25.00	(55.12)
315	400	-	570	200	200	500	600	590	PSTX720-600-70	1SFA898118R7000	46.20	(101.85)
400	500	-	720	250	300	600	700	720	PSTX840-600-70	1SFA898119R7000	46.20	(101.85)
450	600	-	840	300	350	700	800	840	PSTX1050-600-70	1SFA898120R7000	64.20	(141.54)
560	730	-	1050	400	450	900	1000	1062	PSTX1250-600-70	1SFA898121R7000	64.70	(142.64)


Rated operational voltage U_e, 208...690 V

Rated control supply voltage U_s, 100...250 V AC, 50/60 Hz

IEC				UL/CSA				Type	Order code	Weight (1 pce)		
Rated operational power		current		Rated operational power		current				kg	(lb)	
400 V	500 V	690 V		200 / 208 V	220 / 240 V	440 / 480 V	550 / 600 V	FLA				
P _e kW	P _e kW	P _e kW	I _e A	P _e hp	P _e hp	P _e hp	P _e hp	A				
11	15	18.5	22	5	7.5	15	20	25	PSTX30-690-70	1SFA898203R7000	6.10	(13.45)
15	18.5	25	30	7.5	10	20	25	28	PSTX37-690-70	1SFA898204R7000	6.10	(13.45)
18.5	22	30	37	10	10	25	30	34	PSTX45-690-70	1SFA898205R7000	6.10	(13.45)
22	25	37	44	10	15	30	40	42	PSTX60-690-70	1SFA898206R7000	6.10	(13.45)
30	37	55	60	20	20	40	50	60	PSTX72-690-70	1SFA898207R7000	6.10	(13.45)
37	45	59	72	20	25	50	60	68	PSTX85-690-70	1SFA898208R7000	6.10	(13.45)
45	55	75	85	25	30	60	75	80	PSTX105-690-70	1SFA898209R7000	6.10	(13.45)
55	75	90	106	30	40	75	100	104	PSTX142-690-70	1SFA898210R7000	9.60	(21.16)
75	90	132	143	40	50	100	125	130	PSTX170-690-70	1SFA898211R7000	9.60	(21.16)
90	110	160	171	50	60	125	150	169	PSTX210-690-70	1SFA898212R7000	12.70	(27.99)
110	132	184	210	60	75	150	200	192	PSTX250-690-70	1SFA898213R7000	12.70	(27.99)
132	160	220	250	75	100	200	250	248	PSTX300-690-70	1SFA898214R7000	12.70	(27.99)
160	200	257	300	100	100	250	300	302	PSTX370-690-70	1SFA898215R7000	12.70	(27.99)
200	257	355	370	125	150	300	350	361	PSTX470-690-70	1SFA898216R7000	25.00	(55.12)
250	315	450	470	150	200	400	500	480	PSTX570-690-70	1SFA898217R7000	25.00	(55.12)
315	400	560	570	200	200	500	600	590	PSTX720-690-70	1SFA898218R7000	46.20	(101.85)
400	500	710	720	250	300	600	700	720	PSTX840-690-70	1SFA898219R7000	46.20	(101.85)
450	600	800	840	300	350	700	800	840	PSTX1050-690-70	1SFA898220R7000	64.20	(141.54)
560	730	1000	1050	400	450	900	1000	1062	PSTX1250-690-70	1SFA898221R7000	64.70	(142.64)

PSTX – The advanced range

Normal starts, class 10, inside delta, ordering details

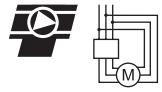

PSTX30 ... PSTX105



PSTX142 ... PSTX170



PSTX210 ... PSTX370



PSTX470 ... PSTX570



PSTX720 ... PSTX840



PSTX1050 ... PSTX1250

Description

Selection table for normal start. Typical applications:

- Bow thruster
- Centrifugal pump
- Compressor
- Conveyor belt (short)
- Elevator



For a more precise selection, use the online softstarter selection tool available by scanning the shown QR code or using the selection tool available on:

new.abb.com/low-voltage/products/softstarters

4

Rated operational voltage U_e, 208...600 V

Rated control supply voltage U_s, 100...250 V AC, 50/60 Hz

IEC	UL/CSA										Type	Order code	Weight (1 pce)			
	Rated operational power			Rated operational power			Rated operational power			current						
	400 V	500 V	690 V	200 / 208 V	220 / 240 V	440 / 480 V	550 / 600 V	FLA								
Pe kW	P _e kW	P _e kW	I _e A	Pe hp	Pe hp	Pe hp	Pe hp	A								
25	30	-	52	10	15	30	40	48	PSTX30-600-70	1SFA898103R7000	6.10	(13.45)				
30	37	-	64	15	20	40	50	58	PSTX37-600-70	1SFA898104R7000	6.10	(13.45)				
37	45	-	76	20	25	50	60	72	PSTX45-600-70	1SFA898105R7000	6.10	(13.45)				
55	75	-	105	30	40	75	100	103	PSTX60-600-70	1SFA898106R7000	6.10	(13.45)				
59	80	-	124	30	40	75	100	117	PSTX72-600-70	1SFA898107R7000	6.10	(13.45)				
75	90	-	147	40	50	100	125	138	PSTX85-600-70	1SFA898108R7000	6.10	(13.45)				
90	110	-	181	60	60	150	150	180	PSTX105-600-70	1SFA898109R7000	6.10	(13.45)				
132	160	-	245	75	75	150	200	225	PSTX142-600-70	1SFA898110R7000	9.60	(21.16)				
160	200	-	300	75	100	200	250	292	PSTX170-600-70	1SFA898111R7000	9.60	(21.16)				
184	250	-	360	100	125	250	300	332	PSTX210-600-70	1SFA898112R7000	12.70	(27.99)				
220	295	-	430	150	150	350	450	429	PSTX250-600-70	1SFA898113R7000	12.70	(27.99)				
257	355	-	515	150	200	450	500	523	PSTX300-600-70	1SFA898114R7000	12.70	(27.99)				
355	450	-	640	200	250	500	600	625	PSTX370-600-70	1SFA898115R7000	12.70	(27.99)				
450	600	-	814	250	300	600	700	830	PSTX470-600-70	1SFA898116R7000	25.00	(55.12)				
540	700	-	987	300	350	700	800	1020	PSTX570-600-70	1SFA898117R7000	25.00	(55.12)				
710	880	-	1247	400	500	1000	1200	1240	PSTX720-600-70	1SFA898118R7000	46.20	(101.85)				
800	1000	-	1455	500	600	1200	1500	1454	PSTX840-600-70	1SFA898119R7000	46.20	(101.85)				
1000	1250	-	1810	600	700	1500	1800	1839	PSTX1050-600-70	1SFA898120R7000	64.20	(141.54)				
1200	1500	-	2160	800	900	1800	2000	2160	PSTX1250-600-70	1SFA898121R1000	64.70	(142.64)				

Rated operational voltage U_e, 208...690 V

Rated control supply voltage U_s, 100...250 V AC, 50/60 Hz

IEC	UL/CSA										Type	Order code	Weight (1 pce)			
	Rated operational power			Rated operational power			Rated operational power			current						
	400 V	500 V	690 V	200 / 208 V	220 / 240 V	440 / 480 V	550 / 600 V	FLA								
Pe kW	P _e kW	P _e kW	I _e A	Pe hp	Pe hp	Pe hp	Pe hp	A								
25	30	45	52	10	15	30	40	48	PSTX30-690-70	1SFA898203R7000	6.10	(13.45)				
30	37	55	64	15	20	40	50	58	PSTX37-690-70	1SFA898204R7000	6.10	(13.45)				
37	45	59	76	20	25	50	60	72	PSTX45-690-70	1SFA898205R7000	6.10	(13.45)				
55	75	90	105	30	40	75	100	103	PSTX60-690-70	1SFA898206R7000	6.10	(13.45)				
59	80	110	124	30	40	75	100	117	PSTX72-690-70	1SFA898207R7000	6.10	(13.45)				
75	90	132	147	40	50	100	125	138	PSTX85-690-70	1SFA898208R7000	6.10	(13.45)				
90	110	160	181	60	60	150	150	180	PSTX105-690-70	1SFA898209R7000	6.10	(13.45)				
132	160	220	245	75	75	150	200	225	PSTX142-690-70	1SFA898210R7000	9.60	(21.16)				
160	200	257	300	75	100	200	250	292	PSTX170-690-70	1SFA898211R7000	9.60	(21.16)				
184	250	315	360	100	125	250	300	332	PSTX210-690-70	1SFA898212R7000	12.70	(27.99)				
220	295	400	430	150	150	350	450	429	PSTX250-690-70	1SFA898213R7000	12.70	(27.99)				
257	355	500	515	150	200	450	500	523	PSTX300-690-70	1SFA898214R7000	12.70	(27.99)				
355	450	600	640	200	250	500	600	625	PSTX370-690-70	1SFA898215R7000	12.70	(27.99)				
450	600	800	814	250	300	600	700	720	PSTX470-690-70	1SFA898216R7000	25.00	(55.12)				
540	700	960	987	300	350	700	800	840	PSTX570-690-70	1SFA898217R7000	25.00	(55.12)				
710	880	1200	1247	400	500	1000	1200	1247	PSTX720-690-70	1SFA898218R7000	46.20	(101.85)				
800	1000	1400	1455	500	600	1200	1500	1454	PSTX840-690-70	1SFA898219R7000	46.20	(101.85)				
1000	1250	1700	1810	600	700	1500	1800	1839	PSTX1050-690-70	1SFA898220R7000	64.20	(141.54)				
1200	1500	2000	2160	800	900	1800	2000	2160	PSTX1250-690-70	1SFA898221R7000	64.70	(142.64)				

PSTX – The advanced range

Heavy-duty, class 30, inside delta, ordering details



PSTX30 ... PSTX105



PSTX142 ... PSTX170



PSTX210 ... PSTX370



PSTX470 ... PSTX570



PSTX720 ... PSTX840



PSTX1050 ... PSTX1250

Description

Selection table for heavy-duty start. Typical applications:

- Centrifugal fan
- Conveyor belt (long)
- Crusher
- Mill
- Mixer
- Stirrer



For a more precise selection, use the online softstarter selection tool available by scanning the shown QR code or using the selection tool available on:

new.abb.com/low-voltage/products/softstarters

Rated operational voltage U_e, 208...600 V

Rated control supply voltage U_s, 100...250 V AC, 50/60 Hz

IEC				UL/CSA						Type	Order code		Weight	
Rated operational power				Rated operational power										(1 pce)
400 V	500 V	690 V	current	200 / 208 V	220 / 240 V	440 / 480 V	550 / 600 V	FLA						
P _e kW	P _e kW	P _e kW	I _e A	P _e hp	P _e hp	P _e hp	P _e hp	A						
18.5	25	-	42	7.5	10	25	30	34	PSTX30-600-70	1SFA898103R7000		6.10	(13.45)	
25	30	-	52	10	15	30	40	48	PSTX37-600-70	1SFA898104R7000		6.10	(13.45)	
30	37	-	64	15	20	40	50	58	PSTX45-600-70	1SFA898105R7000		6.10	(13.45)	
37	45	-	76	20	25	60	60	72	PSTX60-600-70	1SFA898106R7000		6.10	(13.45)	
55	75	-	105	30	40	75	100	103	PSTX72-600-70	1SFA898107R7000		6.10	(13.45)	
59	80	-	124	30	40	75	100	117	PSTX85-600-70	1SFA898108R7000		6.10	(13.45)	
75	90	-	147	40	50	100	125	138	PSTX105-600-70	1SFA898109R7000		6.10	(13.45)	
90	110	-	181	60	60	150	150	180	PSTX142-600-70	1SFA898110R7000		9.60	(21.16)	
132	160	-	245	75	75	150	200	225	PSTX170-600-70	1SFA898111R7000		9.60	(21.16)	
160	200	-	300	75	100	200	250	292	PSTX210-600-70	1SFA898112R7000		12.70	(27.99)	
184	250	-	360	100	125	250	300	332	PSTX250-600-70	1SFA898113R7000		12.70	(27.99)	
220	295	-	430	150	150	350	450	429	PSTX300-600-70	1SFA898114R7000		12.70	(27.99)	
257	355	-	515	150	200	450	500	523	PSTX370-600-70	1SFA898115R7000		12.70	(27.99)	
355	450	-	640	200	250	500	600	625	PSTX470-600-70	1SFA898116R7000		25.00	(55.12)	
450	600	-	814	250	300	600	700	720	PSTX570-600-70	1SFA898117R7000		25.00	(55.12)	
540	700	-	987	300	350	700	800	840	PSTX720-600-70	1SFA898118R7000		46.20	(101.85)	
710	880	-	1247	400	500	1000	1200	1247	PSTX840-600-70	1SFA898119R7000		46.20	(101.85)	
800	1000	-	1455	500	600	1200	1500	1454	PSTX1050-600-70	1SFA898120R7000		64.20	(141.54)	
1000	1250	-	1810	600	700	1500	1800	1830	PSTX1250-600-70	1SFA898121R7000		64.70	(142.64)	

Rated operational voltage U_e, 208...690 V

Rated control supply voltage U_s, 100...250 V AC, 50/60 Hz

IEC				UL/CSA						Type	Order code		Weight	
Rated operational power				Rated operational power										(1 pce)
400 V	500 V	690 V	current	200 / 208 V	220 / 240 V	440 / 480 V	550 / 600 V	FLA						
P _e kW	P _e kW	P _e kW	I _e A	P _e hp	P _e hp	P _e hp	P _e hp	A						
18.5	25	37	42	7.5	10	25	30	34	PSTX30-690-70	1SFA898203R7000		6.10	(13.45)	
25	30	45	52	10	15	30	40	48	PSTX37-690-70	1SFA898204R7000		6.10	(13.45)	
30	37	55	64	15	20	40	50	58	PSTX45-690-70	1SFA898205R7000		6.10	(13.45)	
37	45	59	76	20	25	50	60	72	PSTX60-690-70	1SFA898206R7000		6.10	(13.45)	
55	75	90	105	30	40	75	100	103	PSTX72-690-70	1SFA898207R7000		6.10	(13.45)	
59	80	110	124	30	40	75	100	117	PSTX85-690-70	1SFA898208R7000		6.10	(13.45)	
75	90	132	147	40	50	100	125	138	PSTX105-690-70	1SFA898209R7000		6.10	(13.45)	
90	110	160	181	60	60	150	150	180	PSTX142-690-70	1SFA898210R7000		9.60	(21.16)	
132	160	220	245	75	75	150	200	225	PSTX170-690-70	1SFA898211R7000		9.60	(21.16)	
160	200	257	300	75	100	200	250	292	PSTX210-690-70	1SFA898212R7000		12.70	(27.99)	
184	250	315	360	100	125	250	300	332	PSTX250-690-70	1SFA898213R7000		12.70	(27.99)	
220	295	400	430	150	150	350	450	429	PSTX300-690-70	1SFA898214R7000		12.70	(27.99)	
257	355	600	515	150	200	450	500	523	PSTX370-690-70	1SFA898215R7000		12.70	(27.99)	
355	450	600	640	200	250	500	600	625	PSTX470-690-70	1SFA898216R7000		25.00	(55.12)	
450	600	800	814	250	300	600	700	720	PSTX570-690-70	1SFA898217R7000		25.00	(55.12)	
540	700	960	987	300	350	700	800	840	PSTX720-690-70	1SFA898218R7000		46.20	(101.85)	
710	880	1200	1247	400	500	1000	1200	1247	PSTX840-690-70	1SFA898219R7000		46.20	(101.85)	
800	1000	1400	1455	500	600	1200	1500	1454	PSTX1050-690-70	1SFA898220R7000		64.20	(141.54)	
1000	1250	1700	1810	600	700	1500	1800	1830	PSTX1250-690-70	1SFA898221R7000		64.70	(142.64)	

PSTX – The advanced range

Accessories

4



1SFT98099-095C2



SBB8054C2



1SFT98000-012C3



1SFT98000-011C3



LT ... -AC
LT ... -C



LT ... -AL
LT ... -L


For softstarter type	Wire range mm ²	Tightening torque max. Nm	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Cable connectors for Cu cables						
PSTX142 ... PSTX170	6...120	8		1SDA066917R1	3	0.113 (0.249)
PSTX142 ... PSTX170	2 x (50...95)	16	LZ185-2C/120	1SFN074709R1000	3	0.300 (0.661)
PSTX210 ... PSTX370	16...240	25		1SDA055016R1	3	0.133 (0.293)
PSTX210 ... PSTX370	2 x (70...185)	22	OZXB4	1SCA022194R0890	3	0.570 (1.257)
PSTX720 ... PSTX840	2 x (120...240)	35		1SDA013922R1	3	0.570 (1.257)
PSTX570 ... PSTX1050	3 x (70...185)	45		1SDA013956R1	3	0.570 (1.257)
Cable connectors for Al cables						
PSTX142 ... PSTX170	95...185	31		1SDA054988R1	3	0.078 (0.172)
PSTX210 ... PSTX370	185...240	43		1SDA055020R1	3	0.133 (0.293)
PSTX470 ... PSTX570	2 x (120...240)	31		1SDA023380R1	3	0.110 (0.243)
For softstarter type	Dimensions hole ø mm ²	bar mm	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Terminal extensions						
PSTX142 ... PSTX170	8.5	17.5 x 5	LX205	1SFN074810R1000	1	0.250 (5.551)
PSTX210 ... PSTX370	10.5	20 x 5	LX370	1SFN075410R1000	1	0.350 (0.772)
PSTX470 ... PSTX570	10.5	25 x 5	LX460	1SFN075710R1000	1	0.500 (1.102)
PSTX720 ... PSTX840	13	40 x 6	LX750	1SFN076110R1003	1	0.850 (1.874)
Terminal enlargements						
PSTX30 ... PSTX105	6.5	15 x 3	LW110	1SFN074307R1000	1	0.100 (0.220)
PSTX142 ... PSTX170	10.5	17.5 x 5	LW205	1SFN074807R1000	1	0.250 (5.551)
PSTX210 ... PSTX370	10.5	20 x 5	LW370	1SFN075407R1000	1	0.450 (0.992)
PSTX470 ... PSTX570	10.5	25 x 5	LW460	1SFN075707R1000	1	0.730 (1.609)
PSTX720 ... PSTX840	13	40 x 6	LW750	1SFN076107R1000	1	1.230 (2.712)
For softstarter type	Req. qty	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)	
Terminal shrouds						
PSTX142 ... PSTX170, short for use with cable clamps	2	LT205-30C	1SFN124801R1000	2	0.050 (0.110)	
PSTX142 ... PSTX170, long for use with compression lugs	2	LT205-30L	1SFN124803R1000	2	0.220 (0.485)	
PSTX210 ... PSTX370, short for use with cable clamps	2	LT370-30C	1SFN125401R1000	2	0.035 (0.077)	
PSTX210 ... PSTX370, long for use with compression lugs	2	LT370-30L	1SFN125403R1000	2	0.280 (0.617)	
PSTX210 ... PSTX370, long and deep for use with extending cable clamps, ATK300/2 and OZXB4	2	LT370-30D	1SFN125406R1000	2	0.150 (0.331)	
PSTX470 ... PSTX570, short for use with cable clamps	2	LT460-AC	1SFN125701R1000	2	0.100 (0.220)	
PSTX470 ... PSTX570, long for use with compression lugs	2	LT460-AL	1SFN125703R1000	2	0.800 (1.764)	
PSTX720 ... PSTX840, short for use with cable clamps	2	LT750-AC	1SFN126101R1000	2	0.120 (0.265)	
PSTX720 ... PSTX840, long for use with compression lugs	2	LT750-AL	1SFN126103R1000	2	0.825 (1.819)	
For softstarter type		Type	Order code	Pkg qty	Weight (1 pce) kg (lb)	
FieldBusPlug connection accessory						
PSTX30 ... PSTX1250		PS-FBPA	1SFA896312R1002	1	0.060 (0.132)	
I/O module, 24 V DC digital input						
PSTX30 ... PSTX1250		DX111-FBP.0	1SAJ611000R0101	1	0.220 (0.485)	

PSTX – The advanced range

Technical data

Tripping curves for the integrated electronic overload protection

PSTX has an integrated electronic overload protection that can be set to four different tripping classes. Below you find a curve for each tripping class in cold state.

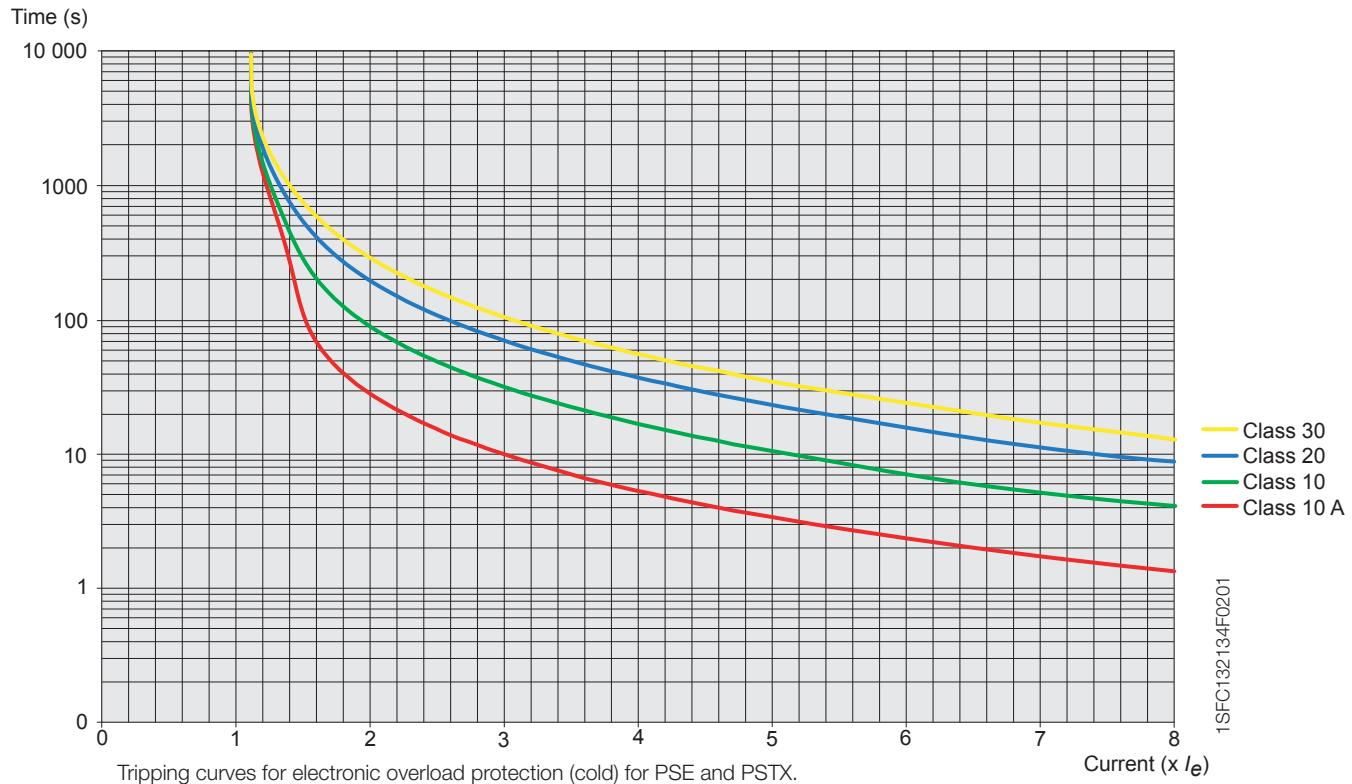

PSTX – The advanced range

Technical data

Softstarter type		PSTX30 ... PSTX1250
Rated insulation voltage U_i		690V
Rated operational voltage U_e		208...600 V, 208...690V +10% / -15%, 50/60Hz ±5%
Rated control supply voltage U_s		100...250 V +10% / -15%, 50/60Hz ±5%
Rated control circuit voltage U_c		Internal or external 24 V DC
Starting capacity at I_e		4 x I_e for 10 sec.
Number of starts per hour		10 for PSTX30 ... PSTX370 ¹⁾ 6 for PSTX470 ... PSTX1250 ¹⁾
Overload capability	Overload class	10
Ambient temperature	During operation	-25...+60 °C, (-13...+140 F) ²⁾
	During storage	-40...+70 °C, (-40...+158 F)
Maximum altitude		4000 m (13123 ft) ³⁾
Degree of protection	Main circuit	IP20
	Supply and control circuit	Yes
Main circuit	Built-in bypass contactor	Yes (thermostat controlled)
	Cooling system - Fan cooled	LCD type, graphical
HMI for settings (Human Machine Interface)	Display	Arabic, Chinese, Czech, Dutch, English, Finnish, French, German, Greek, Indonesian, Italian, Polish, Portuguese, Russian, Spanish, Swedish and Turkish
	Languages	2 selection keys, 4 navigation keys, start key, stop key, info key and remote/local key
Signal relays	Keypad	3 (each relay can be programmed to None, Run, Top of ramp, Event group 0-6, Sequence 1-3 Run, Sequence 1-3 Top of ramp or Run reverse)
	Number of programmable signal relays	K4
		K5
		K6
	Rated operational voltage, U_e	250 V AC/24 V DC
	Rated thermal current I_t	5 A
	Rated operational current I_e at AC-15 ($U_e=250$ V)	1.5 A
Analog output	Output signal reference	0...10 V, 0...10 mA, 0...20 mA, 4...20 mA
	Type of output signal	Motor current (A), Main voltage (V), Active power (kW), Reactive power (kVAr), Apparent power (kVArh), Active energy (kWh), Reactive energy (kWh), cos phi, Motor temperature (%), Thyristor temperature (%), Motor voltage (%), Main frequency (Hz), PT100 temperature (centigrade), PTC resistance (Ohm)
Control circuit	Number of inputs	2 (start, stop)
	Number of additional programmable inputs	3 (each input can be programmed to: None, Reset, Enable, Slow speed forward (Jog), Slow speed reverse (Jog), Motor heating, Stand still brake, Start reverse, User defined protection, Emergency mode (active high), Emergency mode (active low), Fieldbus disable control, Start 1, Start 2, Start 3, Switch to remote control or Cancel brake)
Signalling indication LED	Ready	Green
	Run	Green
	Fault	Red
	Protection	Yellow
External keypad	Detachable keypad	Yes
	Display	LCD type, graphical
	Ambient temperature	
	During operation	-25...+60 °C, (-13...+140 F)
	During storage	-40...+70 °C, (-40...+158 F)
	Degree of protection	IP66 (Type 1, 4X, 12)
Start and stop functions	Soft start with voltage ramp	Yes
	Soft stop with voltage ramp	Yes
	Soft start with torque control	Yes
	Soft stop with torque control	Yes
	Kick start	Yes
	Full voltage start	Yes
	Sequence start	Yes, 3 different sets of settings
	Current limit	Yes
	Dual current limit	Yes
	Current limit ramp	Yes
	Torque limit	Yes
	Pre-start function	Yes (Motor heating or Stand still brake)
	Jog with slow speed, forward and reverse	Yes (3 speed levels)
	Start reverse (external contactors)	Yes
	Dynamic brake	Yes
Field bus connection	Built-in Modbus RTU	Yes
	Connection for Anybus	Yes
	Connection for ABB FieldBusPlug	Yes, with adapter

¹⁾ Valid for normal start (class 10) for 50% on time and 50% off time. If other data is required, contact your local ABB office.

²⁾ Above 40 °C (104 F) up to max. 60 °C (140 F) reduce the rated current with 0,8% per °C (0,44% per F).

³⁾ When used at high altitudes, above 1000 meters (3281 ft) up to 4000 meters (13123 ft), de-rate the rated current using the following formula.

[% of I_e = 100 - $\frac{x}{1000}$] x = actual altitude of the softstarter in meter, [% of I_e = 100 - $\frac{x}{3280}$] x = actual altitude of the softstarter in feet. For de-rating of voltage, contact your local ABB office.

PSTX – The advanced range

Technical data

Softstarter type		PSTX30 ... PSTX1250
Protections	Electronic overload protection, EOL	Yes (Class 10A, 10, 20, 30)
	Dual overload (separate overload for start and run)	Yes
	PTC connection	Yes
	PT-100 connection	Yes
	Locked rotor protection	Yes
	Current underload protection	Yes
	Current imbalance protection	Yes
	Power factor underload protection	Yes
	Under voltage protection	Yes
	Over voltage protection	Yes
	Voltage imbalance protection	Yes
	Earth fault protection / ground fault protection	Yes
	Phase reversal protection	Yes
	24 V output protection	Yes
	Frequency range protection	Yes
	Bypass open protection	Yes
	User defined protection	Yes
	Too long current limit protection	Yes
	HMI failure protection	Yes
	Fieldbus failure protection	Yes
	Extension IO failure protection	Yes
	Max number of starts/hour	Yes
	Too long start time protection	Yes
Warnings	Current underload warning	Yes
	Current imbalance warning	Yes
	Voltage imbalance warning	Yes
	Thyristor overload warning (SCR)	Yes
	Electronic overload Time-to-trip	Yes
	Short circuit warning (for Limp mode)	Yes
	Over voltage warning	Yes
	Under voltage warning	Yes
	Power factor underload warning	Yes
	Locked rotor warning	Yes
	Faulty fan warning	Yes
	THD(U) - Total Harmonic Distortion warning	Yes
	Motor runtime limit warning	Yes
	Phase loss warning (for stand by)	Yes
	EOL warning	Yes
External faults detection	Phase loss	Yes
	High current	Yes
	Low control supply voltage	Yes
	Faulty usage (e.g. using limp mode inside-delta)	Yes
	Faulty connection	Yes
	Bad network quality	Yes
Internal faults detection	Thyristor overload	Yes
	Short circuit	Yes
	Open circuit thyristor or gate	Yes
	Heat sink over temperature	Yes
	Shunt fault	Yes
PTC input	Switch off resistance	2825 ohm ± 20%
	Switch on resistance	1200 ohm ± 20%
Other functions	Real time clock	Yes
	Event log	Yes
	Emergency mode	Yes
	Automatic restart	Yes
	Secure settings	Yes
	Keypad password	Yes
	Electronic overload Time-to-cool	Yes
	Thyristor runtime measurement	Yes
	Auto phase sequence detection	Yes
	Electricity metering	Yes
	Motor heating	Yes
	Stand still brake	Yes
	Voltage sags detection	Yes
	Limp mode with two-phase motor control if one set of thyristors is shorted	Yes

For all functions and features see installation and commissioning manual, 1SFC132081M0201 available on new.abb.com/low-voltage/products/softstarters.

PSTX – The advanced range

Technical data

Fuse ratings and power losses

For softstarter	Current range	Max power loss at rated I_e	Max fuse rating - main circuit ¹⁾ ²⁾ Bussmann fuses, DIN43 620 (Knife)			Power requirements supply circuit Holding (VA) / Pull-in (VA)
			A	Type	Size	
PSTX30	9.0...30.0	0.8	100	170M1567	000	49/51
PSTX37	11.1...37.0	1.2	125	170M1568	000	49/51
PSTX45	13.5...45.0	1.8	160	170M1569	000	49/51
PSTX60	18.0...60.0	3.2	160	170M1569	000	49/51
PSTX72	21.6...72.0	4.7	250	170M1571	000	49/51
PSTX85	22.5...85.0	6.5	315	170M1572	000	49/51
PSTX105	31.8...106.0	10	400	170M3819	1*	49/51
PSTX142	42.9...143.0	18	500	170M5810	2	49/53
PSTX170	51.3...171.0	26	630	170M5812	2	49/53
PSTX210	63.0...210.0	48	630	170M5812	2	56/276
PSTX250	75.0...250.0	68	700	170M5813	2	56/276
PSTX300	90.0...300.0	97	800	170M6812	3	56/276
PSTX370	111.0...370.0	148	900	170M6813	3	56/276
PSTX470	141.0...470.0	99	900	170M6813	3	67/434
PSTX570	171.0...570.0	146	900	170M6814	3	67/434
PSTX720	216.0...720.0	78	1250	170M8554	3	61/929
PSTX840	252.0...840.0	106	1500	170M6018	3	61/929
PSTX1050 ³⁾	315.0...1050.0	165	1800	170M6020	3	68/929
PSTX1250 ³⁾⁴⁾	375.0...1250.0	234	2000	170M6021	3	68/929

¹⁾ For the supply circuit 6 A delayed, for MCB use C characteristics.

²⁾ For inside delta connection the fuses shall be placed inside the delta. Contact ABB for more information.

³⁾ 170M6019 with fuse rating 1600 A should be used for 690 V version.






⁴⁾ For 690 V version, Bussmann fuses are only available for motors with rated current up to 1150 A.

PSTX Integrated bypass ratings

Softstarter	PSTX470	PSTX570	PSTX720	PSTX840	PSTX1050	PSTX1250
Integrated contactor	AF370			AF750		AF1250
AC-3 rating at 400 V (A)	370			750		-
IEC AC-3 Rated operational power at 400 V (kW)	200			400		-
UL/CSA 3-phase motor rating at 480 V (hp)	300			600		-

PSTX – The advanced range

Technical data

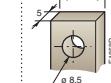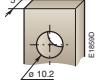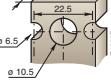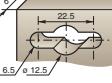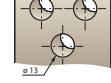
Main terminals	PSTX30 ... PSTX105	PSTX142 ... PSTX170	PSTX210 ... PSTX370	PSTX470 ... PSTX570	PSTX720 ... PSTX1050	PSTX1250
						
Cu cable - flexible Clamp type Tightening torque	1 x mm ² Included 8 Nm	10...70 mm ² Included 10.5 Nm	6...120 mm ² 1ISDA066917R1 14 Nm	16...240 mm ² 1ISDA055016R1 25 Nm	- -	- -
Cu cable - flexible Clamp type Tightening torque	2 x mm ² Included 8 Nm	6...35 mm ² LZ185-2C/120 1SFN074709R1000 16 Nm	50...95 mm ² OZXB4 ¹⁾ 1SCA022194R0890 22 Nm	70...185 mm ² 1ISDA066917R1 25 Nm	- -	- -
Cu cable - Stranded Clamp type Tightening torque	1 x mm ² Included 8 Nm	10...95 mm ² 1ISDA066917R1 14 Nm	6...150 mm ² 1ISDA055016R1 25 Nm	16...300 mm ² 1ISDA066917R1 35 Nm	- -	- -
Cu cable - Stranded Clamp type Tightening torque	2 x mm ² Included 8 Nm	6...35 mm ² LZ185 - 2C/120 1SFN074709R1000 16 Nm	50...120 mm ² OZXB4 ¹⁾ 1SCA022194R0890 22 Nm	70...185 mm ² 1ISDA013922R1 35 Nm	120...240 mm ² 1ISDA013922R1 45 Nm	- -
Cu cable - Stranded Clamp type Tightening torque	3 x mm ² - - -	- - -	- - -	- - -	70...185 mm ² 1ISDA013956R1 45 Nm	- -
Al cable - Stranded Clamp type Tightening torque	1 x mm ² - - -	95...185 mm ² 1ISDA0549881R1 31 Nm	185...240 mm ² 1ISDA055020R1 43 Nm	- -	- -	- -
Al cable - Stranded Clamp type Tightening torque	2 x mm ² - - -	- - -	- - -	- - -	120...240 mm ² 1ISDA023380R1 31 Nm	- -
Lugs	Width ≤ Diameter >=	-	24 mm (0.945 in) 8 mm (0.355 in)	32 mm (1.260 in) 10.2 mm (0.402 in)	47 mm (1.850 in) 10.5 mm (0.413 in)	50 mm (1.969 in) 12.5 mm (0.492 in)
	Tightening torque	-	18 Nm (160 in lb)	28 Nm (248 in lb)	35 Nm (310 in lb)	45 Nm (398 in lb)
Connection capacity acc to UL / CSA 1 x AWG / kcmil	6...2/0	6...300 kcmil	4...400 kcmil	-	-	-
	Clamp type Tightening torque	Included 71 in lb	ATK185 300 in lb	ATK300 375 in lb	- -	- -
Connection capacity acc to UL / CSA 2 x AWG / kcmil	-	-	4...500 kcmil	2/0...500 kcmil	2/0...500 kcmil	-
	Clamp type Tightening torque	-	-	ATK300/2 ²⁾ 375 in lb	ATK580/2 375 in lb	ATK580/2 375 in lb
Connection capacity acc to UL / CSA 3 x AWG / kcmil	-	-	-	2/0...500 kcmil	2/0...500 kcmil	-
	Clamp type Tightening torque	-	-	ATK750/3 375 in lb	ATK750/3 375 in lb	- -
Supply and control circuit						
Cu cable - Stranded 1 x mm ²			0.75...2.5 mm ² (19...14 AWG)			
Cu cable - Stranded 2 x mm ²			0.75...1.5 mm ² (19...16 AWG)			
Tightening torque			0.5 Nm (4.4 in lb)			

¹⁾ Terminal shrouds 1SFN125406R1000 must be used.


²⁾ Terminal shrouds 1SFN125406R1000 can be used.

PSTX – The advanced range Dimensions





PSTX30 ... PSTX105

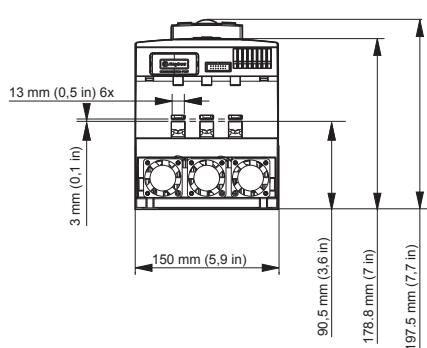


PSTX142 ... PSTX170

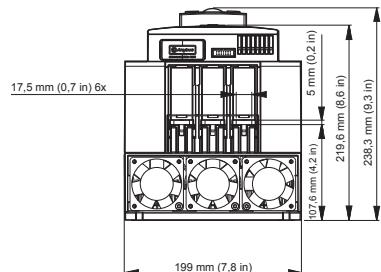

PSTX210 ... PSTX370

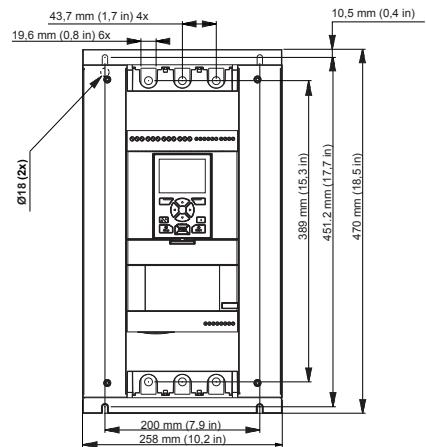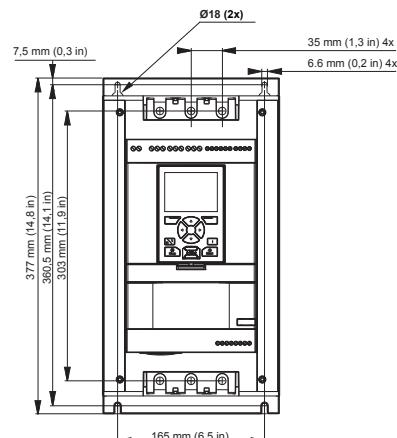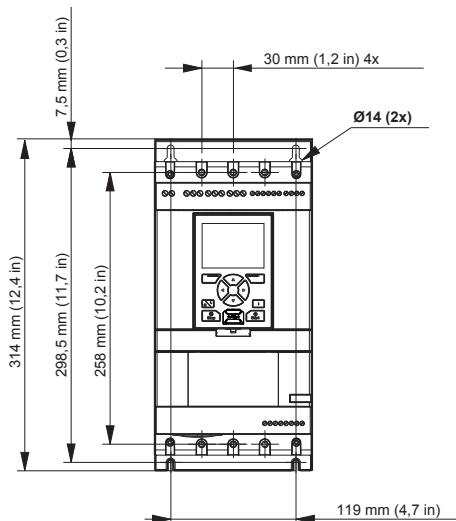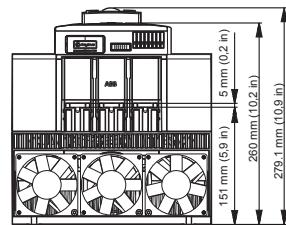

PSTX detachable keypad

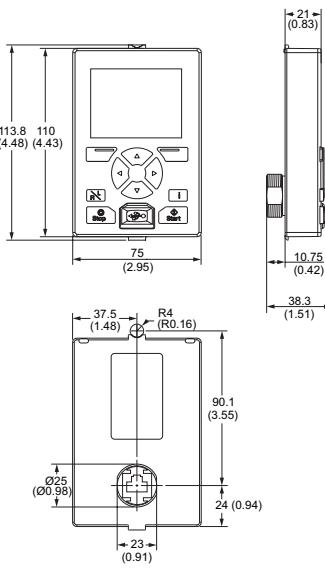


Dimensions in mm (in)


PSTX – The advanced range

Dimensions





PSTX470 ... PSTX570

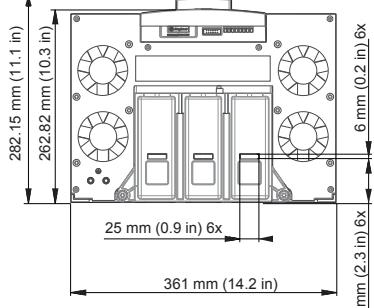



PSTX720 ... PSTX840

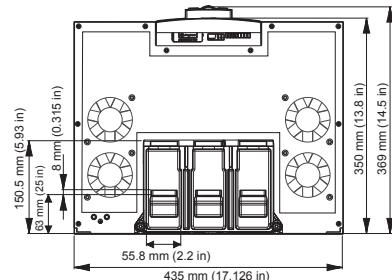

PSTX1050

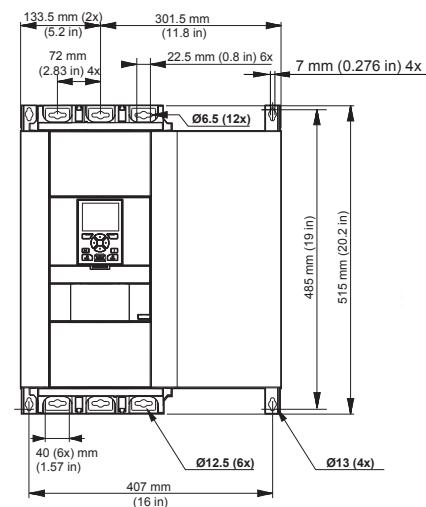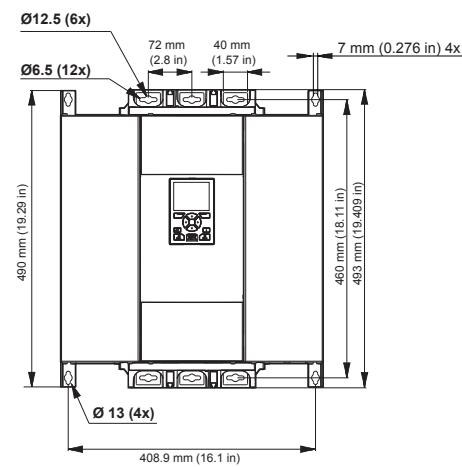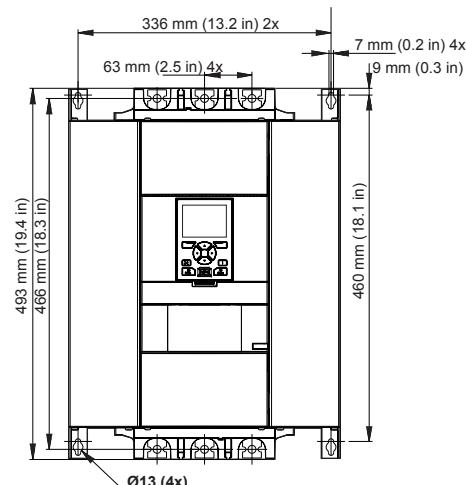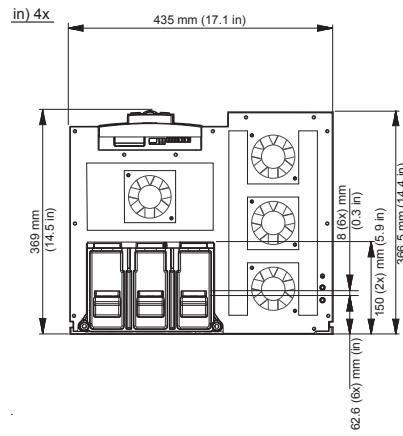

PSTX1250

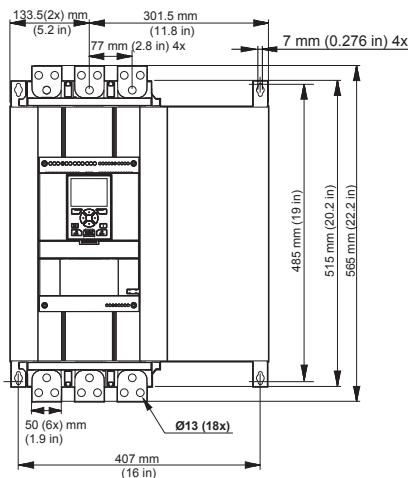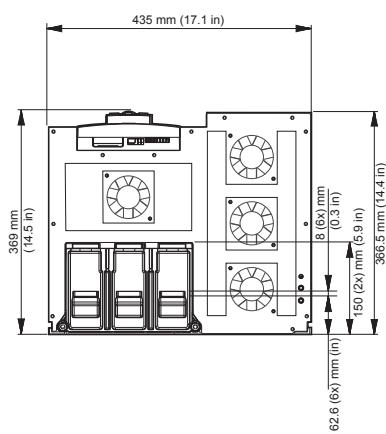

Dimensions in mm (in)

PSTX – The advanced range

Circuit diagrams




CAUTION

Terminal 22 is a function earth, it is not a protective earth. It shall be connected to the mounting plate.


PSTX30 ... PSTX1250

IEC circuit diagram

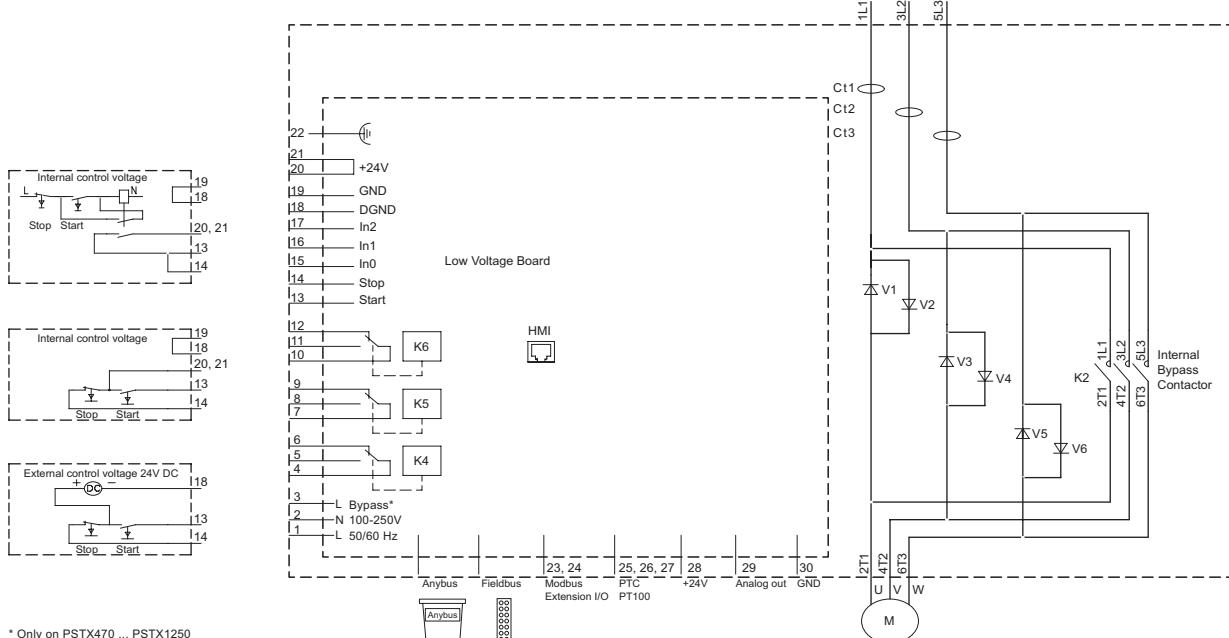

* Only on PSTX470 ... PSTX1250

UL circuit diagram

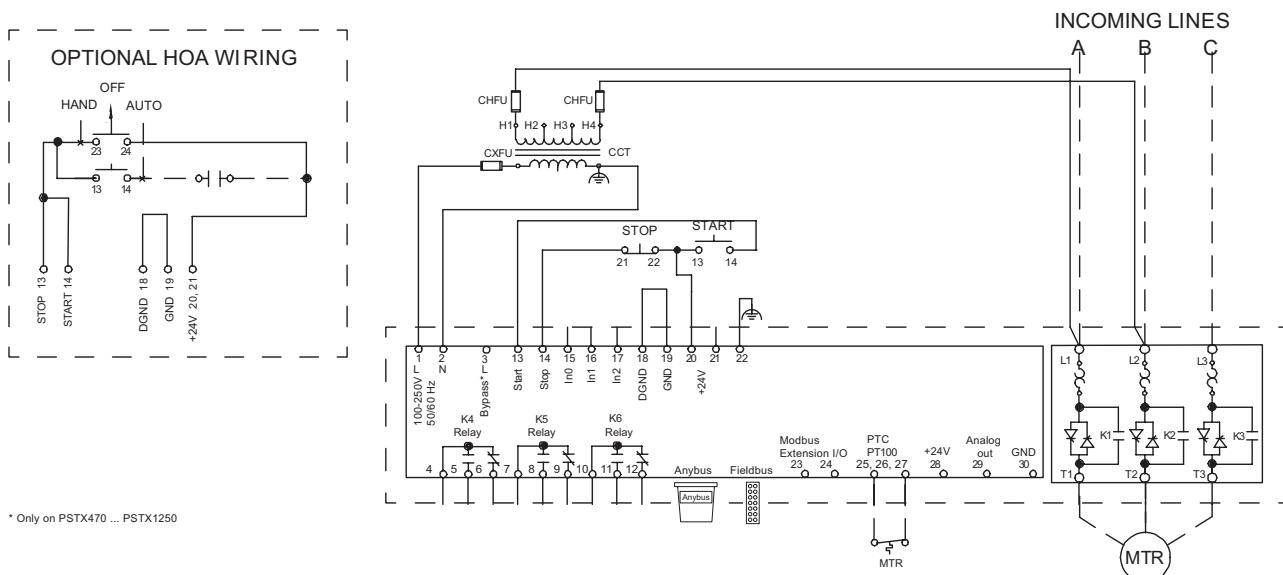

* Only on PSTX470 ... PSTX1250



For more circuit diagrams see new.abb.com/low-voltage/products/softstarters

PSTX – The advanced range




Circuit diagrams

PSTX30 ... PSTX1250

In-line connected with line contactor and fuses

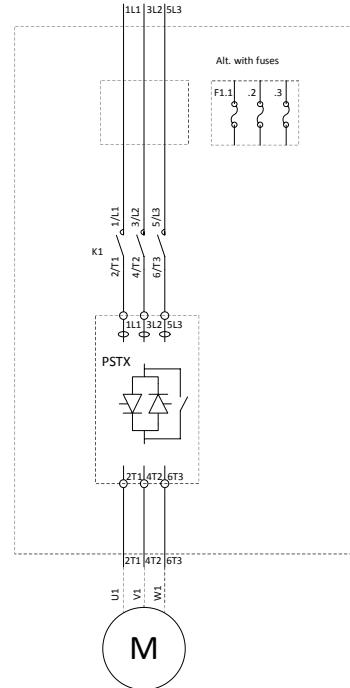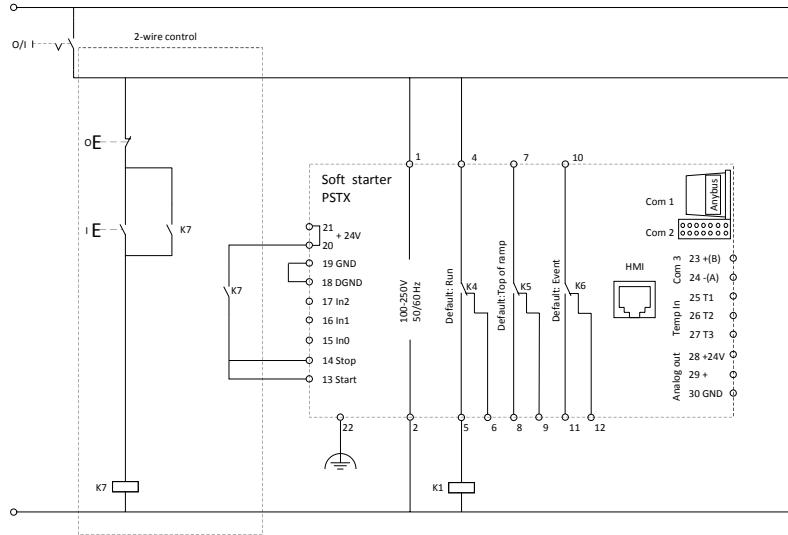

Inside-delta connected with contactor and fuses

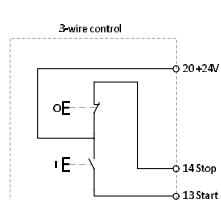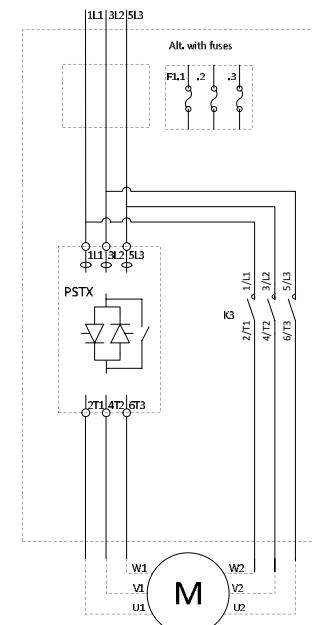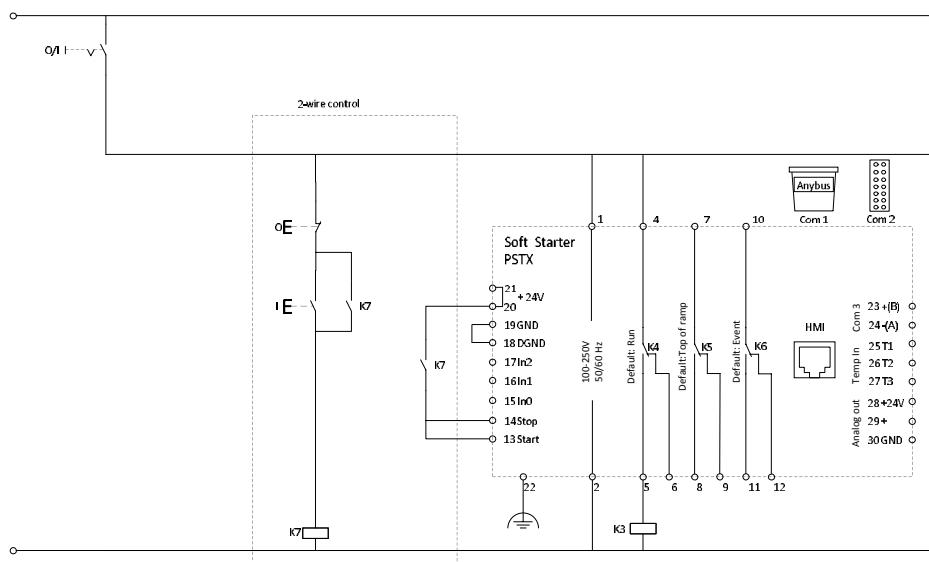

Coil consumption for Inside Delta contactor.

Pull-in max 15A

Holding max 1,5A

If the pull-in or holding values are higher, the Inside Delta contactor must be controlled via an auxiliary contactor.



Fieldbus communication

Fieldbus communication

Introduction	5/2
Anybus	5/3
FieldBusPlug ordering details	5/4
FieldBusPlug accessories ordering details	5/6


5

Fieldbus communication

Introduction

PSR, PSE and PSTX softstarters can be connected to a fieldbus network for monitoring and control. All major industrial fieldbus protocols are covered with different accessories making the installation very flexible.

5

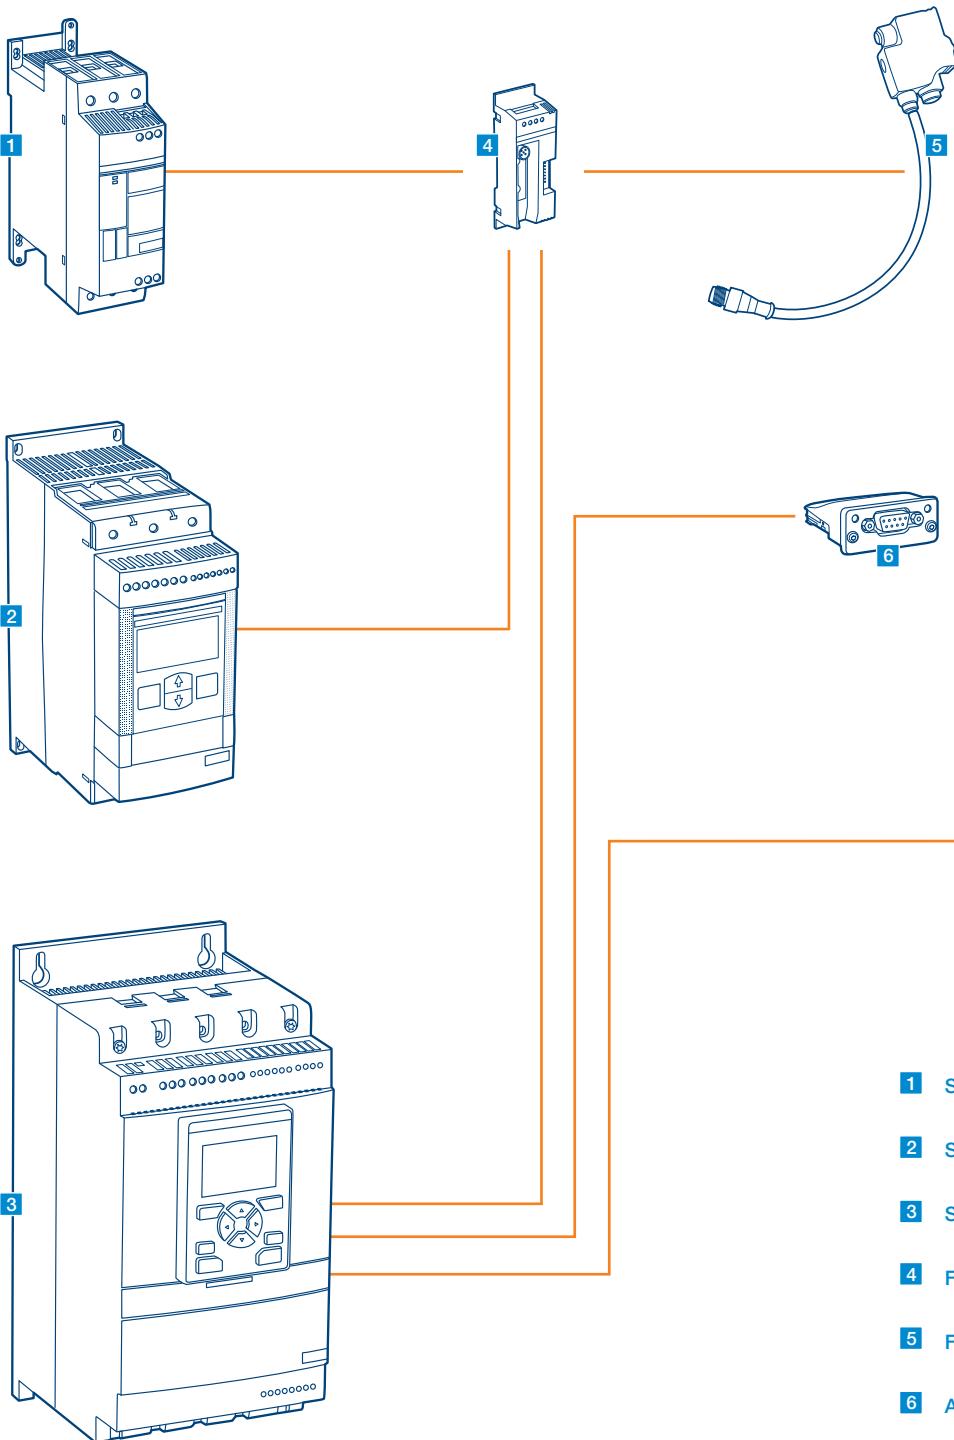

Protocols with FieldBusPlug

- Modbus-RTU
- Profibus
- DeviceNet
- Modbus TCP (only PSE)


Protocols with Anybus

- Modbus-RTU
- Profibus
- DeviceNet
- EtherNet/IP
- Modbus TCP
- Profinet

Integrated protocol

- Modbus-RTU

Fieldbus communication Anybus ordering details

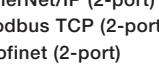	For communication protocol	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
	ISFC1321200001	Profibus	AB-PROFIBUS-1	1SFA899300R1001	1 0.042 (0.093)
	ISFC1321210001	DeviceNet	AB-DEVICENET-1	1SFA899300R1002	1 0.042 (0.093)
	ISFC1321180001	Modbus-RTU	AB-MODBUS-RTU-1	1SFA899300R1003	1 0.042 (0.093)
	ISFC1321190001	EtherNet/IP (1-port) Modbus TCP (1-port)	AB-ETHERNET-IP-1	1SFA899300R1005	1 0.042 (0.093)
	ISFC1321190001	EtherNet/IP (2-port) Modbus TCP (2-port) Profinet (2-port)	AB-ETHERNET-IP-2	1SFA899300R1006	1 0.042 (0.093)
	ISFC1321190001	Modbus TCP (1-port)	AB-MODBUS-TCP-1	1SFA899300R1007	1 0.042 (0.093)
	ISFC1321190001	Modbus TCP (2-port)	AB-MODBUS-TCP-2	1SFA899300R1008	1 0.042 (0.093)
	ISFC1321190001	Profinet (2-port)	AB-PROFINET-2	1SFA899300R1010	1 0.042 (0.093)

Fieldbus communication

FieldBusPlug ordering details

 Black cable

DeviceNet FieldBusPlug

- Ready-made DeviceNet fieldbus interface with various cable lengths
- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED



Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
DeviceNet-FBP	0.25 m	DNP21-FBP.025	1SAJ230000R1003	1	0.09 (0.20)
DeviceNet-FBP	0.50 m	DNP21-FBP.050	1SAJ230000R1005	1	0.10 (0.22)
DeviceNet-FBP	1.00 m	DNP21-FBP.100	1SAJ230000R1010	1	0.13 (0.29)
DeviceNet-FBP	5.00 m	DNP21-FBP.500	1SAJ230000R1050	1	0.36 (0.79)



DNP21-FBP
MRP21-FBP
COP21-FBP

Modbus-RTU FieldBusPlug

- Ready-made Modbus-RTU fieldbus interface with various cable lengths
- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED

Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
MODBUS-RTU-FBP	0.25 m	MRP21-FBP.025	1SAJ250000R0003	1	0.09 (0.20)
MODBUS-RTU-FBP	0.50 m	MRP21-FBP.050	1SAJ250000R0005	1	0.10 (0.22)
MODBUS-RTU-FBP	1.00 m	MRP21-FBP.100	1SAJ250000R0010	1	0.13 (0.29)
MODBUS-RTU-FBP	5.00 m	MRP21-FBP.500	1SAJ250000R0050	1	0.36 (0.79)



MTQ22-FBP

Ethernet Modbus TCP interface MTQ22-FBP

- Ethernet connectivity for up to four units
- Modbus TCP protocol
- Supports all network topologies
- No special Ethernet connectors required in MCCs
- Easy to use in withdrawable applications

Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Ethernet Modbus TCP interface		MTQ22-FBP	1SAJ260000R0100	1	0.20 (0.44)
Cable MTQ to FieldBusPlug adapter	1.5 m	CDP17-FBP.150	1SAJ929170R0015	1	0.01 (0.02)
Passive cable fixing bracket		CDP11-FBP.4	1SAJ929100R0004	4	0.01 (0.02)

To connect the softstarter to a DeviceNet fieldbus system...

you need specific software for PLC setup, (EDS file) which is available at
new.abb.com/low-voltage/products/softstarters

If you need help or advice, please contact your local ABB office.

Fieldbus communication

FieldBusPlug ordering details

Purple cable



PDP22-FBP



PDQ22-FBP

Profibus DP FieldBusPlug

- Ready-made Profibus DP fieldbus interface with various cable lengths.
- Supports PROFIBUS DP V0 and V1
- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED

Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Profibus DP FBP	0.25 m	PDP22-FBP.025	1SAJ240100R1003	1	0.09 (0.20)
Profibus DP FBP	0.50 m	PDP22-FBP.050	1SAJ240100R1005	1	0.10 (0.22)
Profibus DP FBP	1.00 m	PDP22-FBP.100	1SAJ240100R1010	1	0.13 (0.29)
Profibus DP FBP	2.00 m	PDP22-FBP.200	1SAJ240100R1020	1	0.20 (0.44)
Profibus DP FBP	5.00 m	PDP22-FBP.500	1SAJ240100R1050	1	0.36 (0.79)

Profibus DP FieldBusPlug for four devices

- 5
- PDQ22 is a member of the ABB's FieldBusPlug family of bus connectors. It allows the connection of up to four devices to Profibus DP by just using one Profibus node access. This allows a cost efficient device integration for devices that are located physically nearby. PDQ22 supports DP-V0 and DP-V1. The degree of protection is IP66. There are separate diagnosis LEDs for bus and device status.

Note that the accessory PDQ22-FBP only works with the PSR and PSE softstarter.

Designation	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Quadruple bus connector	PDQ22-FBP	1SAJ240200R0050	1	0.20 (0.44)
DINrail adapter for PDQ22-FBP	CDA11-FBP.0	1SAJ929300R0001	1	0.11 (0.24)
Fixing bracket for passive plug of connection cable	CDP11-FBP.0	1SAJ929100R0001	1	0.50 (1.10)

Configuration software

- This cable and software can be used for setup and commissioning of the softstarter as well as to keep back-up of the parameter settings.

Designation	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
USB to FBP interface cable	UTF21-FBP	1SAJ929400R0002	1	0.01 (0.02)
PDP22/PDQ22 Device Type Manager (DTM) incl. FDT/DTM frame application	PBDTM-FBP	1SAJ924012R0005	1	- -

To connect the softstarter to a Profibus DP fieldbus system...

you need specific software for PLC setup, (GSD file) which is available at
new.abb.com/low-voltage/products/softstarters

If you need help or advice, please contact your local ABB office.



2DC54101S0010

Fieldbus communication

FieldBusPlug accessories ordering details

 Black cable



DNF11-FBP.050



DNM11-FBP.050



DNX11-FDP



DNF11-FBP.0



DNR11-FBP.120

Accessories for the DeviceNet and Modbus-RTU bus connector



DeviceNet and Modbus-RTU round cable for bus junctions

Ready-made bus cable with an M12 connector and an open cable end

Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Round cable with female connector	0.50 m	DNF11-FBP.050	1SAJ923002R0005	1	0.04 (0.09)
Round cable with male connector	0.50 m	DNM11-FBP.050	1SAJ923003R0005	1	0.04 (0.09)

Devicenet and Modbus-RTU round cable for bus extension

Ready-made bus cable with M12 male and female connectors

Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Extension cable	1.00 m	DNX11-FBP.100	1SAJ923001R0010	1	0.08 (0.18)
Extension cable	3.00 m	DNX11-FBP.300	1SAJ923001R0030	1	0.20 (0.44)
Extension cable	5.00 m	DNX11-FBP.500	1SAJ923001R0050	1	0.31 (0.68)
Round cable	100.00 m	DNC11-FBP.999	1SAJ923004R0001	1	5.60 (12.35)

DeviceNet and Modbus-RTU round cable connectors

Bus cable and coupling accessories

Designation	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Male connector for round cable	DNM11-FBP.0	1SAJ923005R0001	5	0.15 (0.33)
Female connector for round cable	DNF11-FBP.0	1SAJ923006R0001	5	0.15 (0.33)

DeviceNet and Modbus-RTU termination resistor

Designation	Type	Order code	Pkg qty	Weight (1 pce) kg (lb)
Termination Resistor, 120 Ohm	DNR11-FBP.120	1SAJ923007R0001	1	0.02 (0.04)

Fieldbus communication

FieldBusPlug accessories ordering details

Purple cable



PDF11-FBP.50
2CDC 341 048 F0003



PDM11-FBP.50
2CDC 341 049 F0003



PDX11-FBP
2CDC 341 047 F0003



PDM11-FBP
2CDC 341 051 F0003



PDF11-FBP
2CDC 341 050 F0003



PDR11-FBP.150
2CDC 341 054 F0003

PDV11-FBP,
PDV12-FBP
2CDC 341 053 F0003



PDA11-FBP.050
2CDC 341 008 F0004



PDA12-FBP.050
2CDC 341 007 F0004

Accessories for the Profibus DP Bus Connector

Profibus DP Round cable for Bus Junctions

- Ready-made bus cable with an M12 connector and an open cable end.
- Application on bus junctions such as e.g. Profibus DB couplers or devices with an integrated Profibus DB interface



Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce)
				kg	(lb)
Round cable with female connector	0.50 m	PDF11-FBP.050	1SAJ924002R0005	1	0.04 (0.09)
Round cable with male connector	0.50 m	PDM11-FBP.050	1SAJ924003R0005	1	0.04 (0.09)

Profibus DP round cable for bus extension

- Ready-made bus cable with M12 male and female connectors
- Round cable on coil

Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce)
				kg	(lb)
Extension cable	0.50 m	PDX11-FBP.050	1SAJ924001R0005	1	0.04 (0.09)
Extension cable	1.00 m	PDX11-FBP.100	1SAJ924001R0010	1	0.08 (0.18)
Extension cable	3.00 m	PDX11-FBP.300	1SAJ924001R0030	1	0.20 (0.44)
Extension cable	5.00 m	PDX11-FBP.500	1SAJ924001R0050	1	0.31 (0.68)
Round cable	100.00 m	PDC11-FBP.999	1SAJ924004R1000	1	5.60 (12.35)

Profibus DP accessories for bus extension

Designation	Type	Order code	Pkg qty	Weight (1 pce)
			kg	(lb)
Male Connector for round cable	PDM11-FBP.0	1SAJ924005R0001	5	0.03 (0.07)
Female Connector for round cable	PDF11-FBP.0	1SAJ924006R0001	5	0.03 (0.07)

Profibus DP termination resistor, miscellaneous accessories

Designation	Type	Order code	Pkg qty	Weight (1 pce)
			kg	(lb)
Termination resistor, 150 Ohm	PDR11-FBP.150	1SAJ924007R0001	1	0.03 (0.07)
Feeding connector 24V DC, Code B-A	PDV11-FBP.0	1SAJ924008R0001	1	0.04 (0.09)
Feeding connector 24V DC, Code A-A	PDV12-FBP.0	1SAJ924011R0001	1	0.04 (0.09)
Adaptor M12-Dsub9-M12 Cable length 0.50m	PDA11-FBP.050	1SAJ924009R0001	1	0.04 (0.09)
Adaptor M12-Dsub9-M12 Cable length 2 x 0.50m	PDA12-FBP.050	1SAJ924010R0001	1	0.04 (0.09)

Extension cable


Designation	Cable length	Type	Order code	Pkg qty	Weight (1 pce)
				kg	(lb)
Extension cable (female/male), shielded	0.3 m	CDP15-FBP.030	1SAJ929140R0003	1	0.01 (0.02)
Extension cable (female/male), shielded	0.6 m	CDP15-FBP.060	1SAJ929140R0006	1	0.01 (0.02)
Extension cable (female/male), shielded	1.5 m	CDP15-FBP.150	1SAJ929140R0015	1	0.20 (0.44)
Extension cable (male/open), shielded	1.5 m	CDP16-FBP.150	1SAJ929150R0015	1	0.20 (0.44)

ABB softstarters

Marketing material and tools

It is easy to access more information about ABB's softstarters online. On our web page you will find tools for selection, coordination tables, CAD drawings and different types of documentation.

6

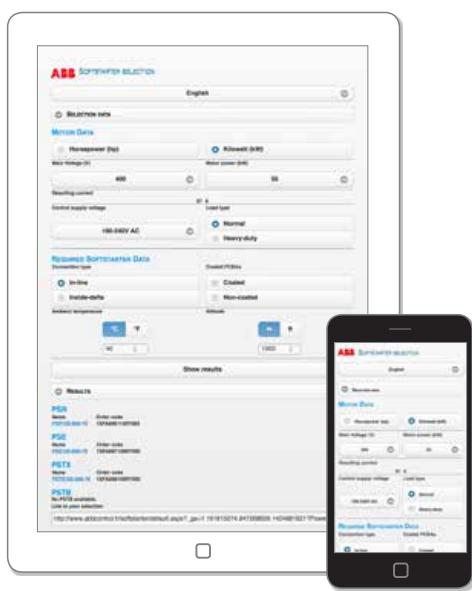

Online softstarter selection tool

Fast and easy selection of softstarter on any device.




www.abbcontrol.fr/softstarter

Coordination tables

Online tool for coordination with short circuit protection, overload protection and line contactor.



applications.it.abb.com/SOC



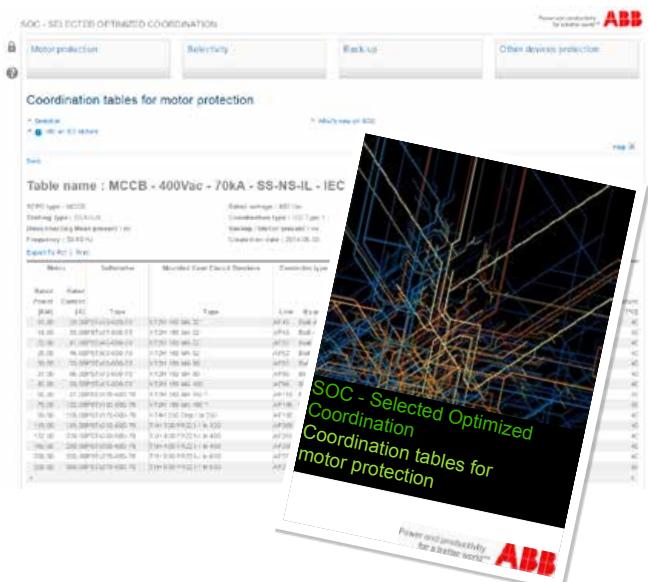


Download 2D and 3D drawings in any format

Use our Cadenas portal to download CAD drawings to all our softstarters.



Cadenas portal for
CAD drawings

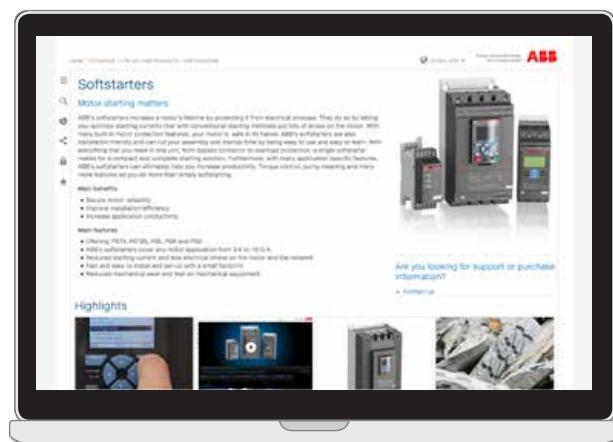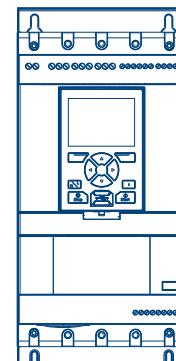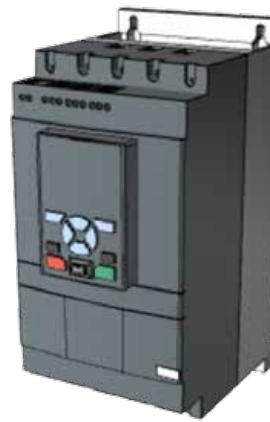

new.abb.com/low-voltage/products/softstarters

More information online

- Product catalogs and brochures
- Certificates and approvals
- Case studies
- Product simulator
- Circuit diagrams and application diagrams
- Manuals
- EDS- and GSD-files for fieldbus connection
- Softstarter selection tool

6




<http://new.abb.com/low-voltage/launches/pstx>

SoftstarterCare™ – Service Engineer Tool

Software for easy set-up of PSE and PSTX, using a PC.



[new.abb.com/low-voltage/
products/softstarters](http://new.abb.com/low-voltage/products/softstarters)

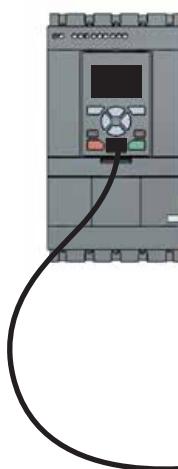

Contact us

ABB AB
Low Voltage Products
SE-721 61 VÄSTERÅS, Sweden
new.abb.com/low-voltage
new.abb.com/low-voltage/launches/pstx



Note

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents - in whole or in parts – is forbidden without prior written consent of ABB.

Copyright© 2015 ABB
All rights reserved